


Quarter Glass


Glass Adjustment

*: Adjusting bolt locations

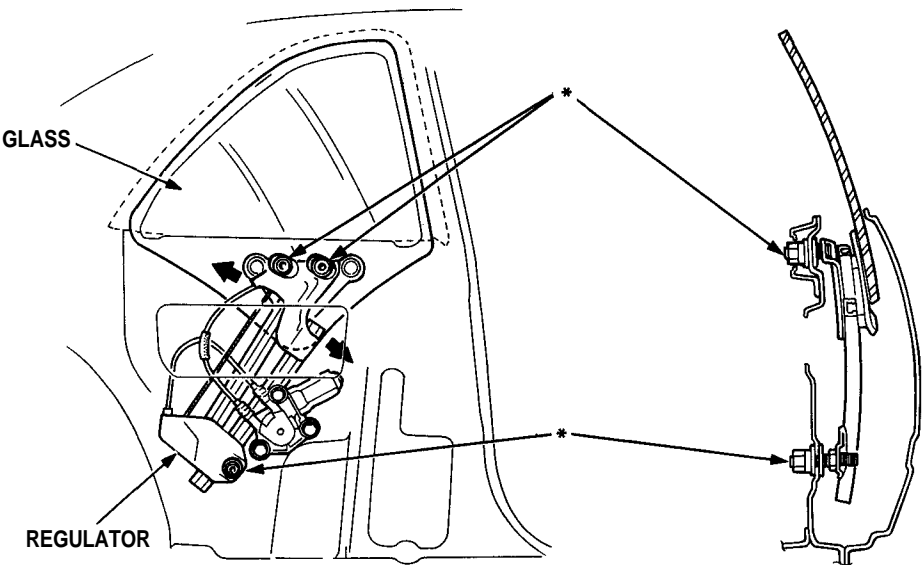

NOTE: Lower the glass.

1. Remove:
 - Quarter trim panel (see page 20-16)
 - Plastic cover (see page 20-16)
 - Quarter trim (see page 20-43 ('91-'92)('93-'95))
 - Quarter molding and glass run channel (see page 20-19)
2. Remove the power window switch from the quarter trim panel (see page 20-16).
3. Connect the power window switch connector to the switch.
4. Carefully raise the glass fully while holding the glass to prevent it from contacting the body panel.
5. Measure and record the clearance "H" and "B" between the glass and body at the locations shown.
6. Adjust the clearance as described in the following steps.

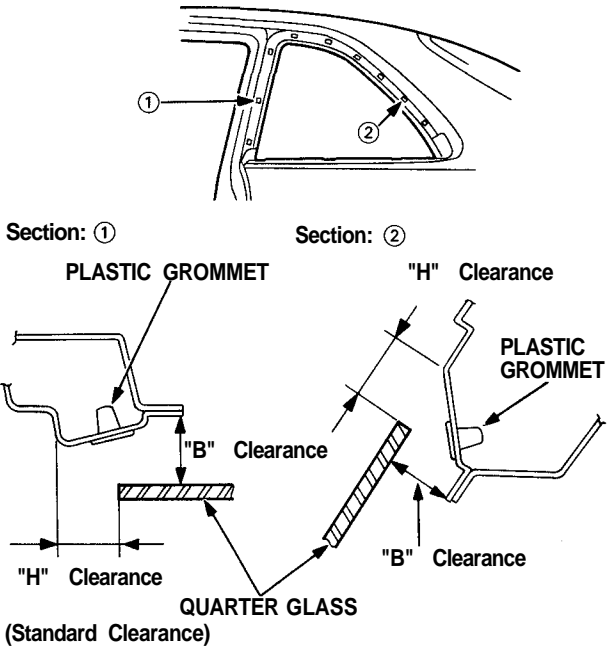


- Permissible tolerance: $\pm 2 \text{ mm}$ (0.08 in)

Unit: mm (in)

Measuring Point	①	②
H	17 (0.67)	16 (0.63)
B	25.15 (0.99)	25.15 (0.99)





7. Adjust clearance "H" as follows.

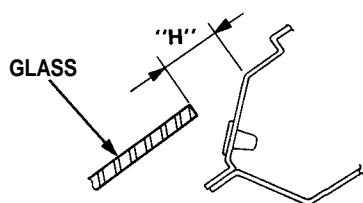


Loosen the three lockouts securing the regulator and move the regulator fore or aft to align the glass with the body at the center and rear pillars.


NOTE: Hold the adjusting bolts with a hex wrench when loosening the locknuts.

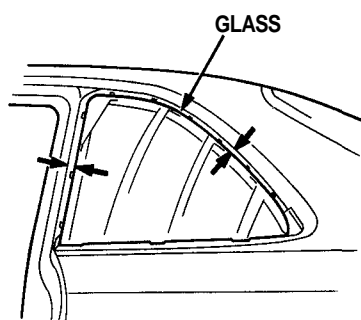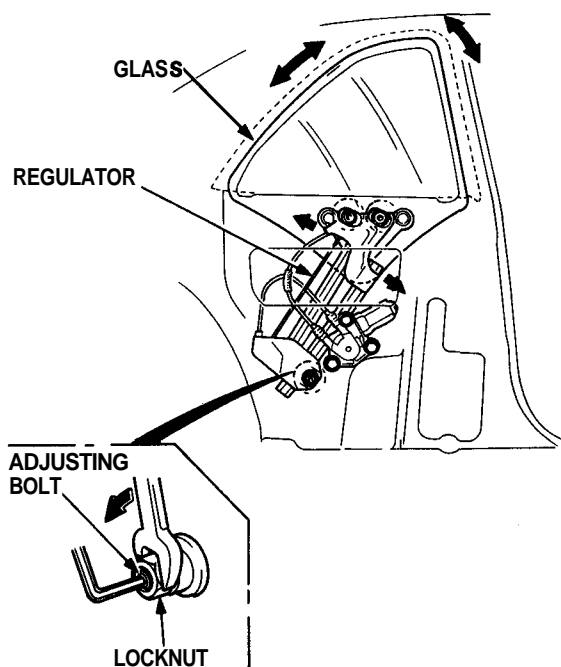

8. Adjust clearance "B" as follows.

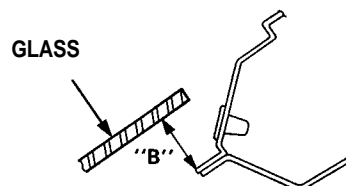


- 1 Loosen the lower lockout of the regulator and turn the adjusting bolt until the clearance "B" is within the specified value.

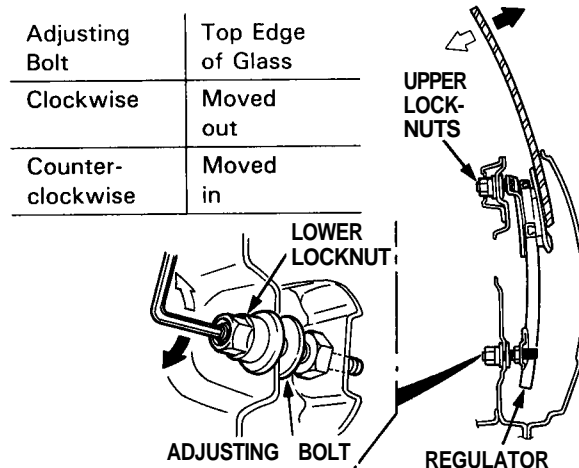

- 2 Loosen the upper locknuts of the regulator and turn the adjusting bolts until the clearance "B" is within the specified value.


	Adjusting Bolt	To move Top Edge of Glass	
		Front	Rear
①	Clockwise	In	Out
②	Counterclockwise	Out	In
③	Clockwise	Out	In
④	Counterclockwise	In	Out

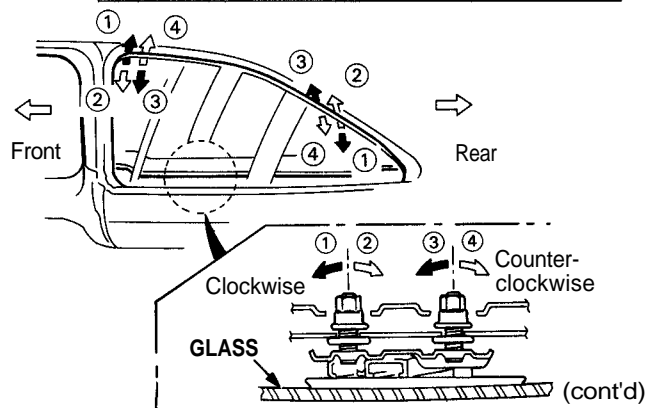

Quarter Glass


Glass Adjustment (cont'd)

9. After the clearance has been adjusted properly, slant the glass inwards until the top edge of the glass is 6 mm (0.19 in) farther inside from the adjusted position.

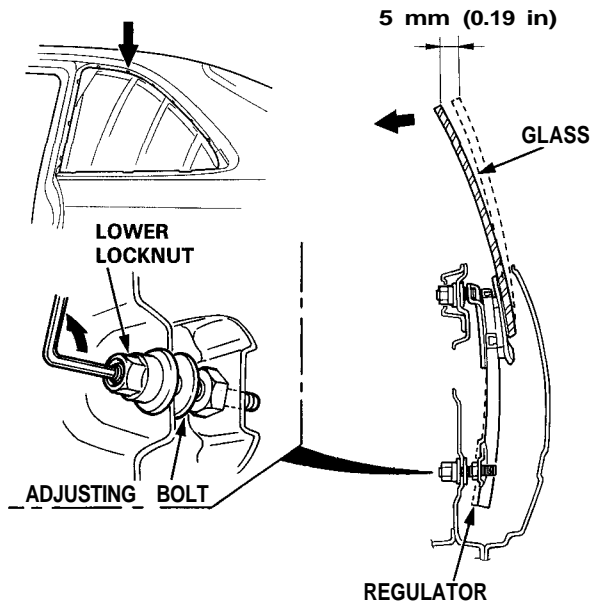


10. After adjusting the quarter glass reinstall the quarter molding and glass run channel.
11. Raise the glass fully and check for gaps and glass operation.
12. Check the glass contacts the glass run channel evenly.
13. Install the quarter trim.

Section: ①

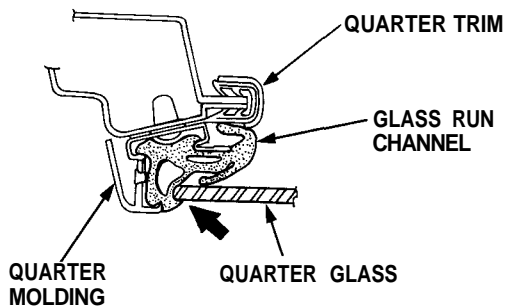


Section: ②

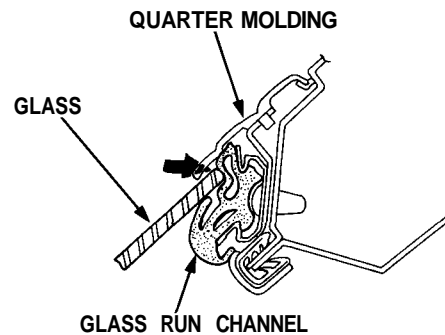

14. Check for water leaks.

NOTE: Do not use high pressure water.

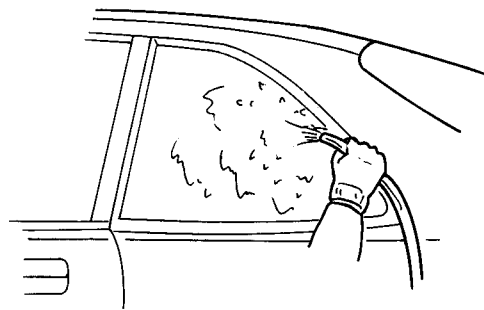

15. Install the power window switch in the quarter trim panel.
16. Attach the plastic cover, and install the quarter trim panel (see pages 20-16, 17).