


Front Seat

Removal

NOTE: Take care not to scratch the seat covers and body.

1. Remove the front seat in the numbered sequence.

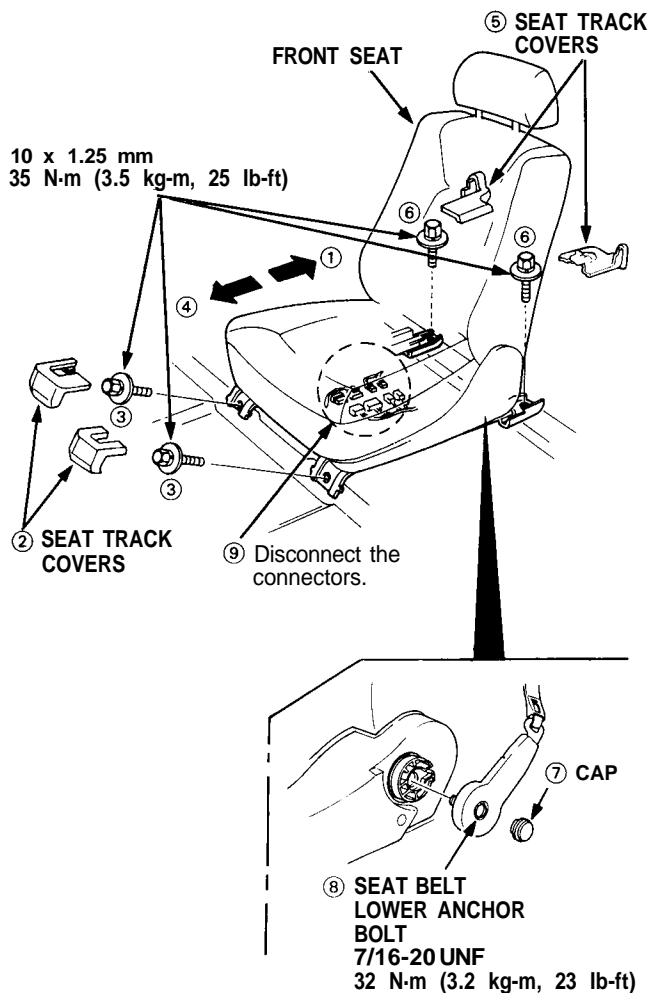

2. Installation is the reverse of the removal procedure.


NOTE: Make sure the connectors are connected properly.

Replacement

NOTE:


- Take care not to scratch the seat covers.
- Remove the front seat.

1. Remove the cushion front cover, recline cover and height cover.

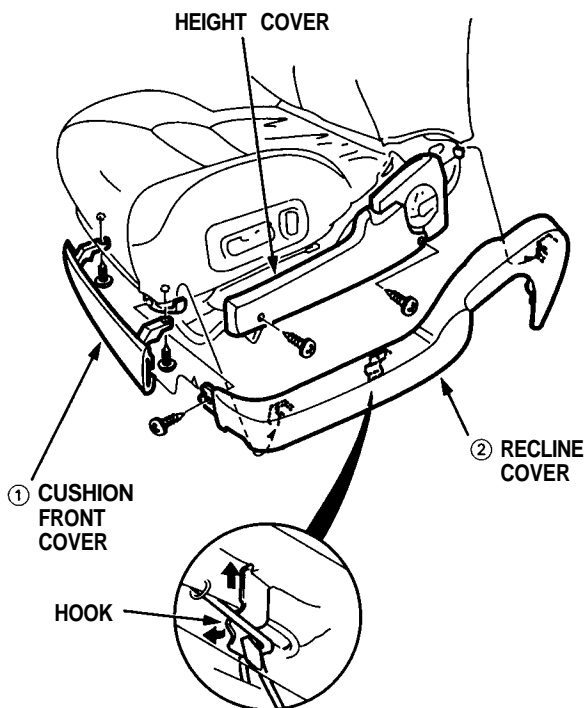


2. Pull the switch knobs. Remove the trim panel by sliding it forward. Remove the clips as shown.

NOTE: The clip installation is described on page [20-50](#).

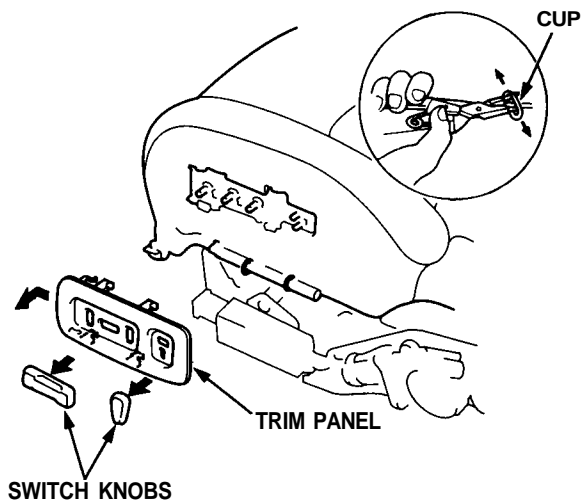




3. Remove the center cover and seat belt buckle (see page 20-68).

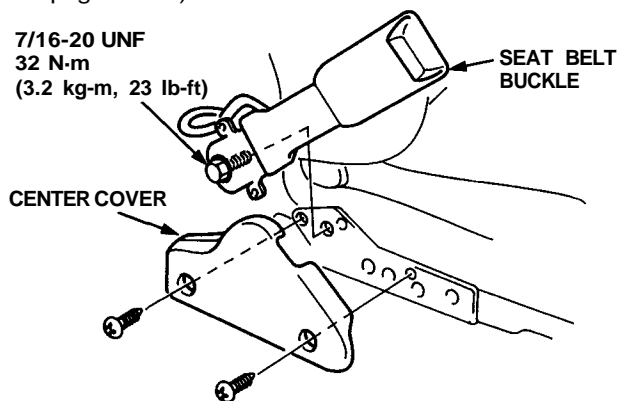


4. Remove the seat belt presenter. Fully power and manually adjustable type: see page 20-68.

Power two-way adjustable type:

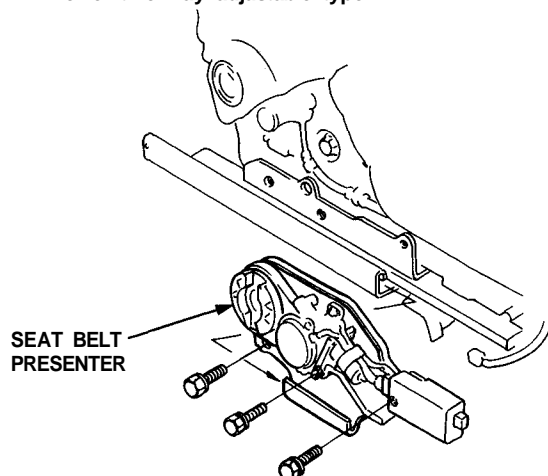


5. Detach the springs, then pull back the seat cover from under the front seat.

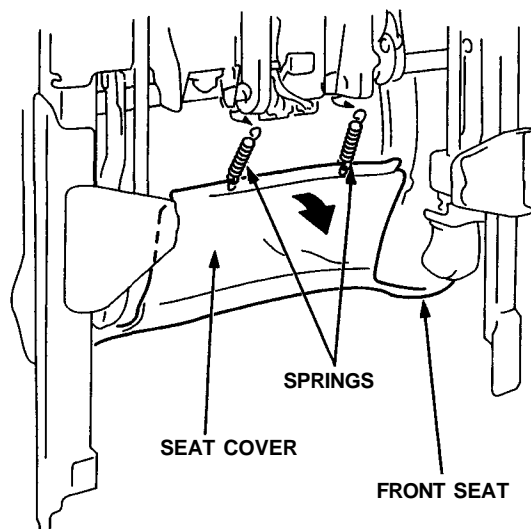


6. Detach the wire ties and clips, and disconnect the connectors.

- ▶ A: Clip locations
- ▶ B: Wire tie locations

Driver's (Fully power adjustable):

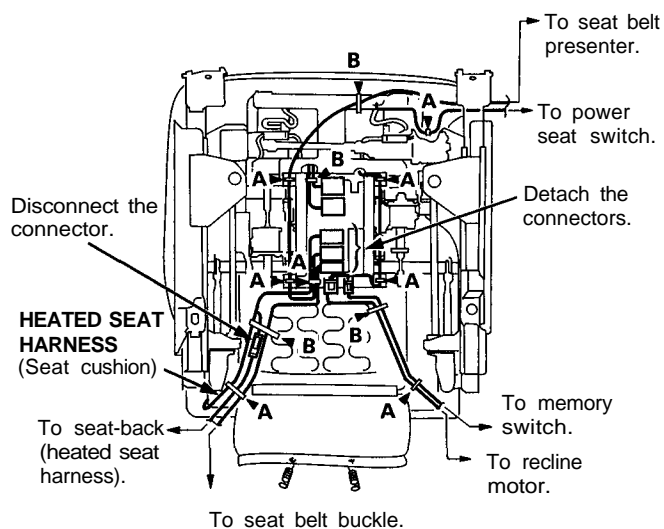

Passenger's (Power two-way adjustable):

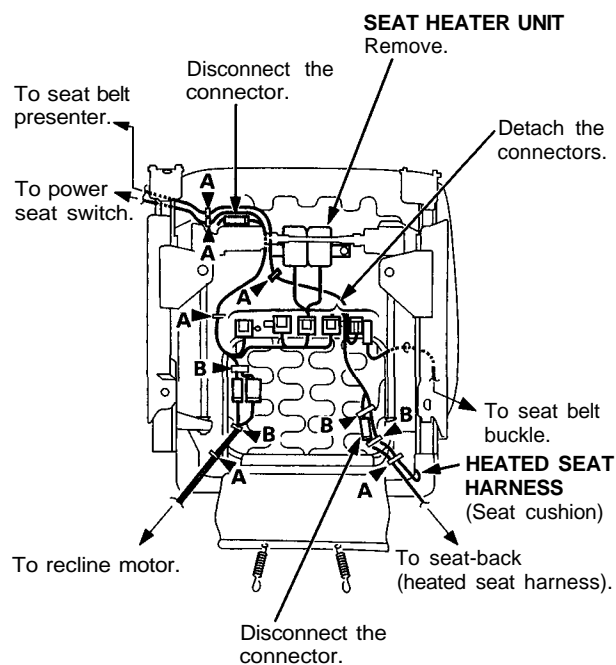


(cont'd)


Front Seat

Replacement (cont'd)

7. Remove the seat cushion as shown.

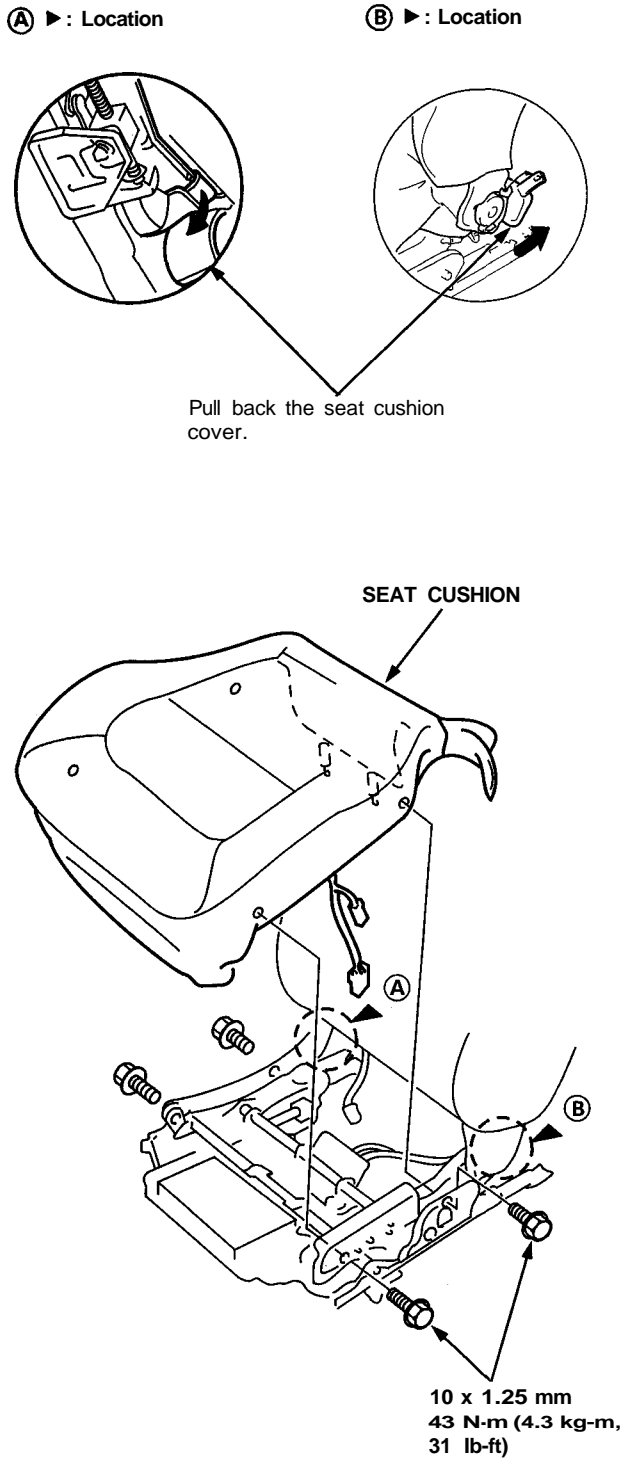


8. Remove the back cover, then remove the seat-back as shown.

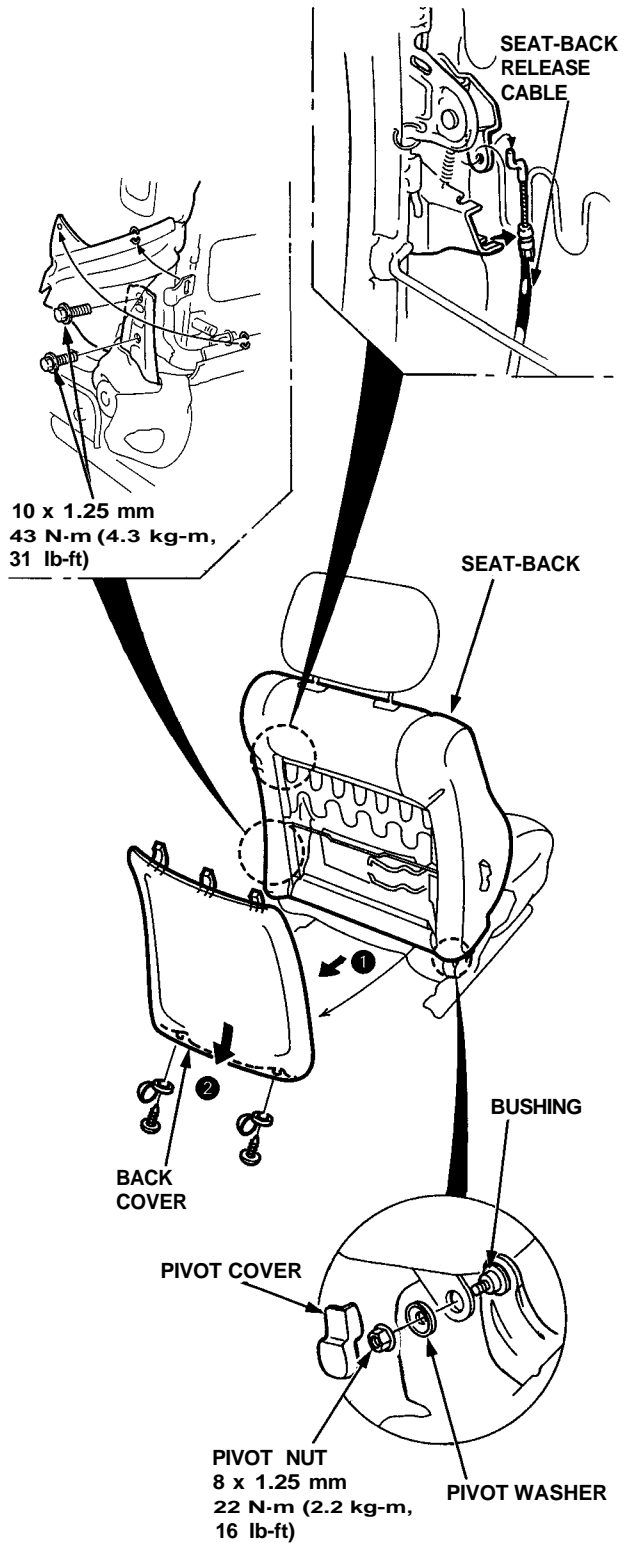



9. Remove the recline adjuster cover.

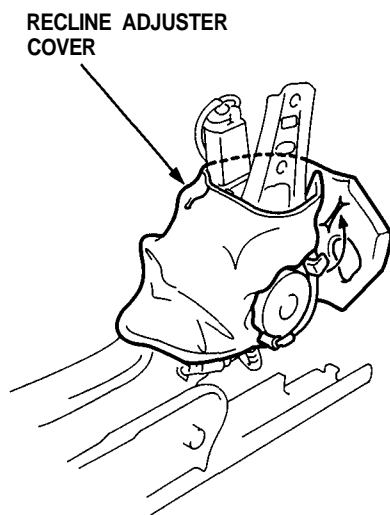

10. Installation is the reverse of the removal procedure.

NOTE: Make sure the connectors are connected properly.