

Front Seat





Seat Cover Replacement

CAUTION: Wear gloves to remove and install the seat covers.

NOTE: Take care not to split the seams or damage the seat covers.


Seat-back cover removal:

1. Remove the seat-back (see page 20-48).
2. Remove the lumbar support knob, seat-back release trim and rear access slide switch trim.
3. Loosen the seat-back cover by releasing all the clips and inside springs.
4. Remove the headrest and headrest guides, then remove the seat-back cover.

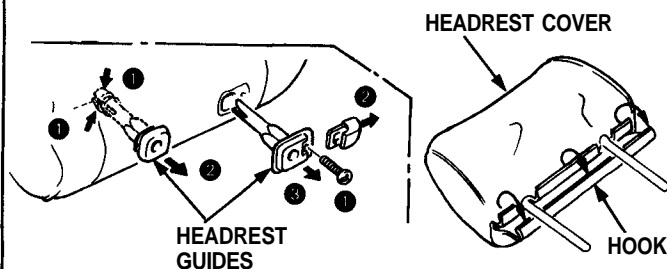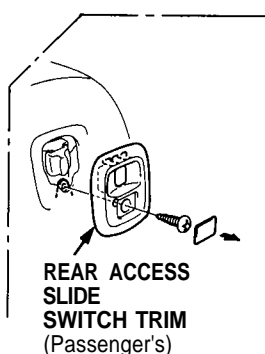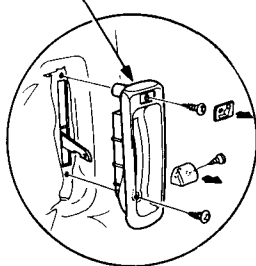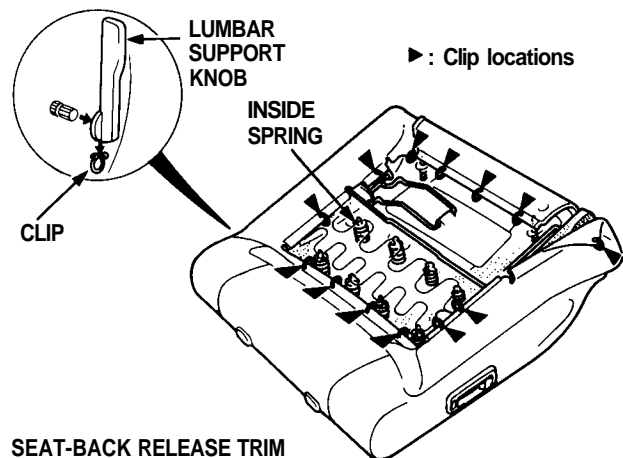

Seat cushion cover removal:

1. Remove the seat cushion (see page 20-48).
2. Remove all hooks and clips from under the seat cushion, then loosen the seat cushion cover. Separate the seat cushion cover and frame.
3. Pull back the edge of the seat cushion cover all the way around. Release the inside clips, then separate the seat cushion cover and pad.

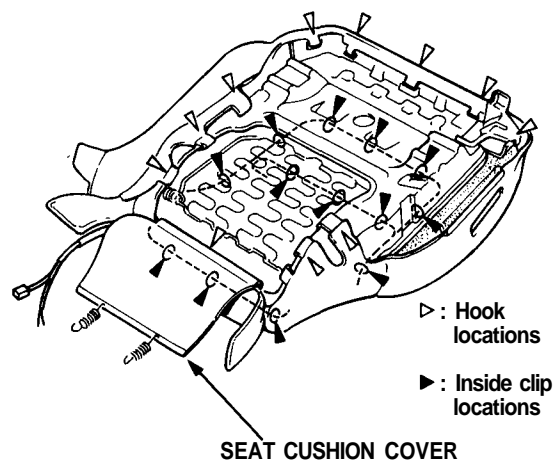

4. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles when installing a seat cover, make sure the material is stretched evenly over the frame before securing all the clips.
- Replace the clips with new ones.

