

Front Seat Linkage

Slide Joint Cable Replacement


CAUTION: Wear gloves to remove and install the slide joint cable.

NOTE:

- Take care not to scratch the seat covers.
- Remove the front seat (see page 20-46).

1. Remove the slide joint cable.


NOTE: Take care not to bend the slide joint cable.

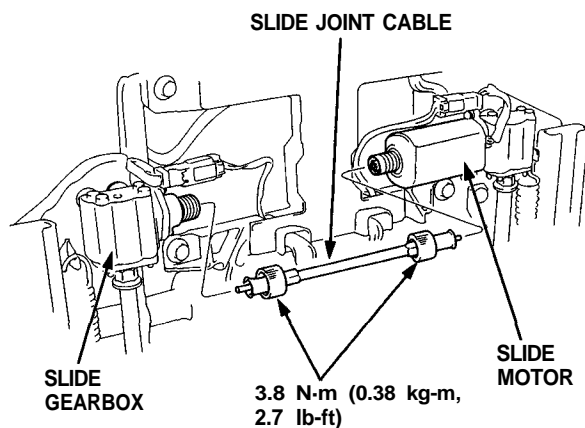

2. Installation is the reverse of the removal procedure.

NOTE:

- When installing the slide joint cable, set the inner cable securely.

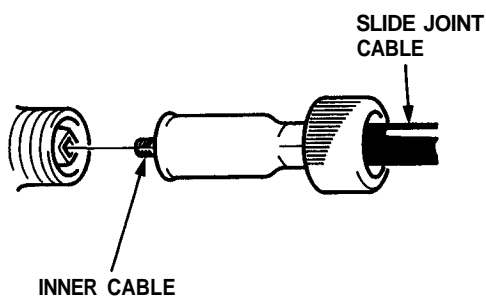


- Check that the slide motor and slide gearbox operate properly.

Recline Memory Switch Replacement

CAUTION: Wear gloves to remove and install the front seat.

NOTE: Take care not to scratch the seat covers.



1. Remove the front seat (see page 20-46).
2. Remove the cushion front cover, recline cover and height cover (see page 20-46).
3. Disconnect the connector and detach the wire ties (see page 20-47).

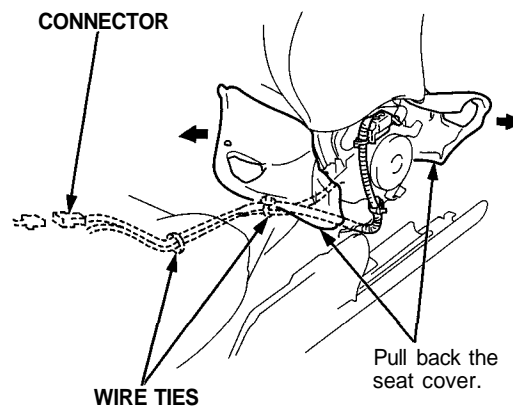

4. Remove the recline memory switch.

NOTE: Take care not to damage the recline memory switch.

 
►: Screw locations ,2

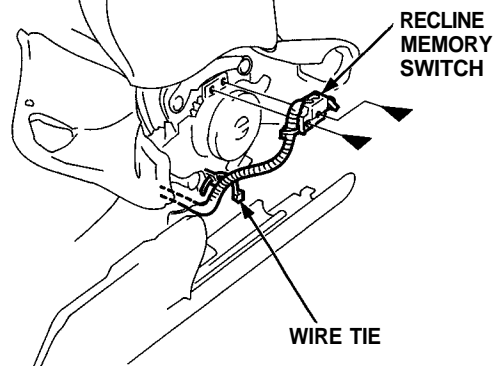





5. Remove the recline memory switch from the bracket.

A ▶ : Screw locations ,2

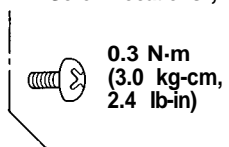

B ▶ : Nut locations ,2

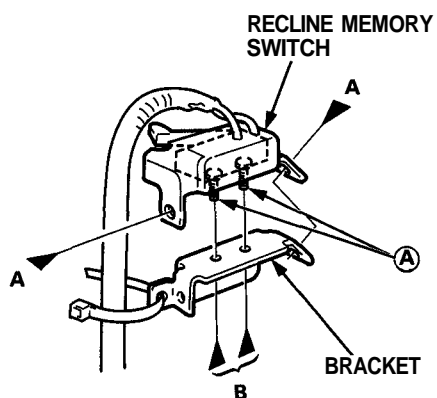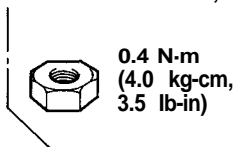

6. Installation is the reverse of the removal procedure.

NOTE:

- After installing the recline memory switch, apply liquid thread lock to (A) locations, then tighten the nuts.
- Make sure the connector is connected properly.
- Check the recline memory switch operation.