

Seat Belts



Front Seat Belt Replacement

SRS wire harnesses are routed near the retractor.

⚠ WARNING All SRS wire harnesses and connectors are colored yellow. Do not use electrical test equipment on these circuits.

CAUTION:





- Be careful not to damage the SRS wire harnesses when servicing the retractor.
- Remove the short connector (RED) from the connector holder and disconnect the SRS wire harness connector, then connect the short connector (RED) to the seat belt pretensioner connector.

NOTE: To prevent contamination, wrap the SRS wire harness connector with a protective cover.

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.


NOTE: Remove all three anchor bolts and the retractor bolt using a 17 mm socket or box-end wrench.

1. Remove:
 - Rear seat (see page 20-66)
 - Quarter trim panel (see page 20-16)
2. Remove the seat belt guide.
3. Remove the upper anchor bolt.
4. Remove the front seat, then remove the cap and lower anchor bolt.

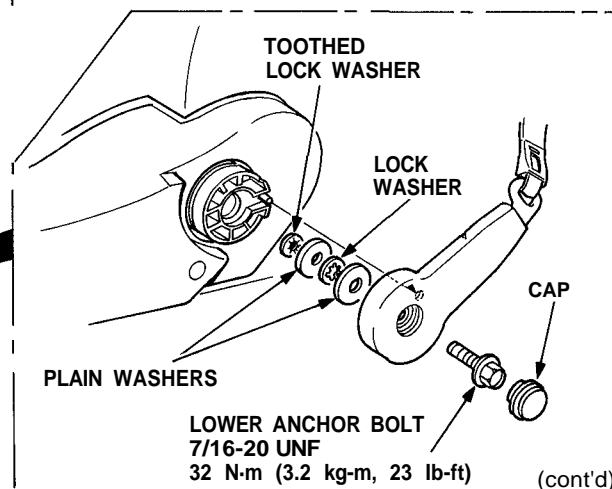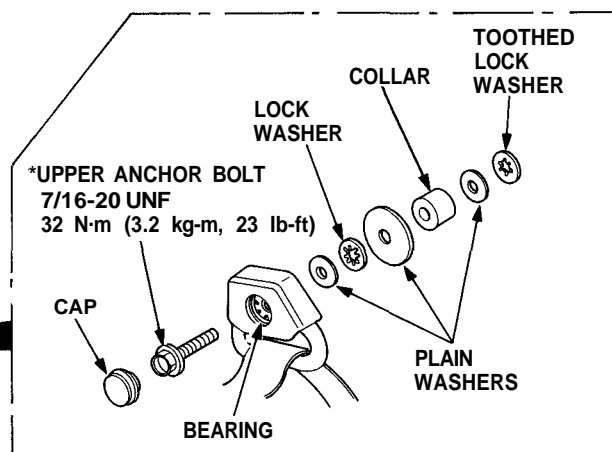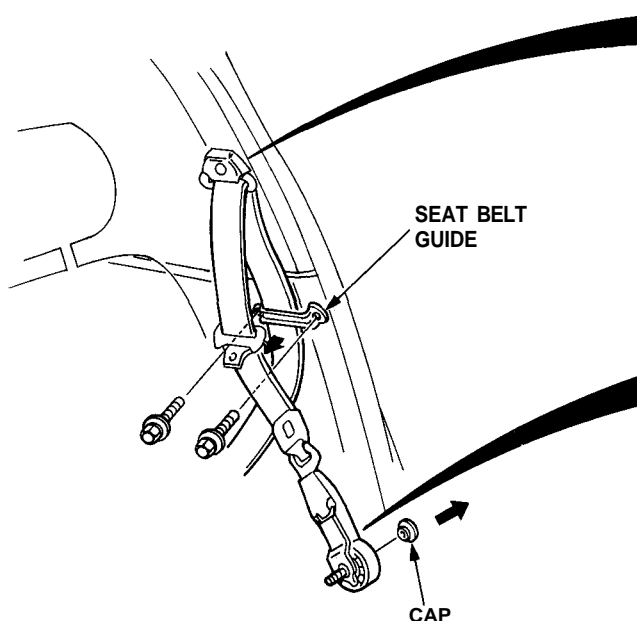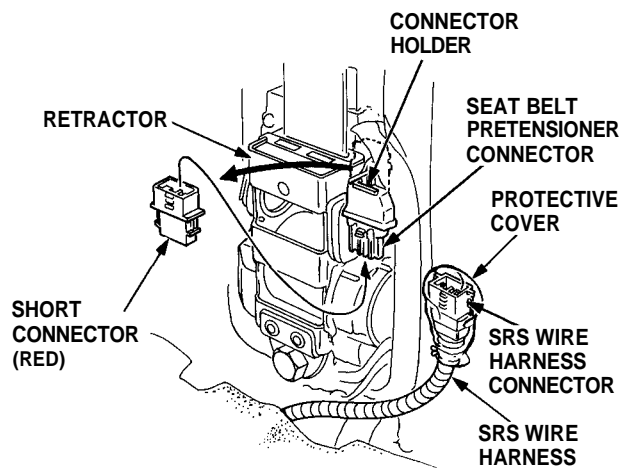

Seat Belts

Front Seat Belts Replacement (cont'd)

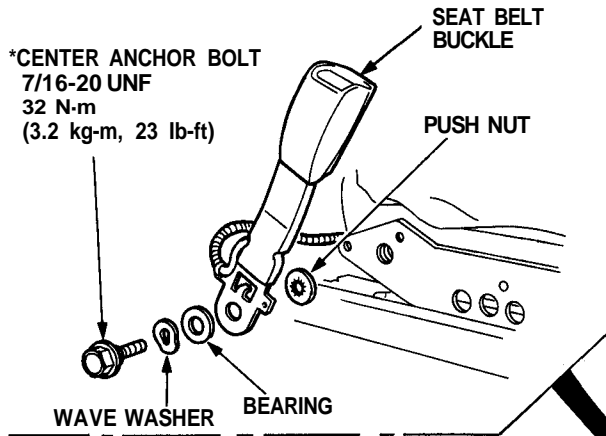

5. Remove the center anchor bolt, then remove the seat belt buckle.

6. Remove the retractor bolts and retractor mounting bolt, then remove the front seat belt.

CAUTION: When removing the retractor, do not touch the seat belt pretensioner.

7. Check that the retractor locking mechanism functions as described on page 20-71.

NOTE: When storage of the seat belts is necessary, store them in a place free from water, oil, grease, heat and direct sunlight.

8. Remove the recline and height covers (see page 20-46).

9. Remove the screws, disconnect the spring and connector.

10. Remove the seat belt presenter from the front seat as shown.

NOTE: If necessary, disassemble the seat belt presenter (see page 20-69).

11. Installation is the reverse of the removal procedure.

NOTE:

- Make sure you assemble the washers and collars on the upper, center and lower anchor bolts as shown.
- Before reinstalling the quarter trim panel, make sure there are no twists or kinks in the seat belts.
- On reassembly, replace the upper and center anchor bolts (*) and use liquid thread lock.

