




Seat Belt Presenter Disassembly

NOTE:

- Apply grease to all moving surface.
- Do not apply grease to the cogged belt.

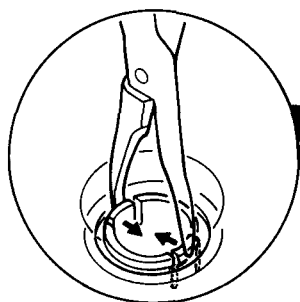

Using snap ring pliers, pinch the hooks of the rotary plate A to remove the component parts.

