


Seat Belts

Rear Seat Belt Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the rear seat (see page [20-66](#)).
2. Remove the rear pillar trim panel.
3. Remove all anchor bolts, the retractor bolt and retractor mounting bolt, then remove the seat belts.

NOTE: Remove all anchor bolts and the retractor bolt using a 17 mm socket or box-end wrench.

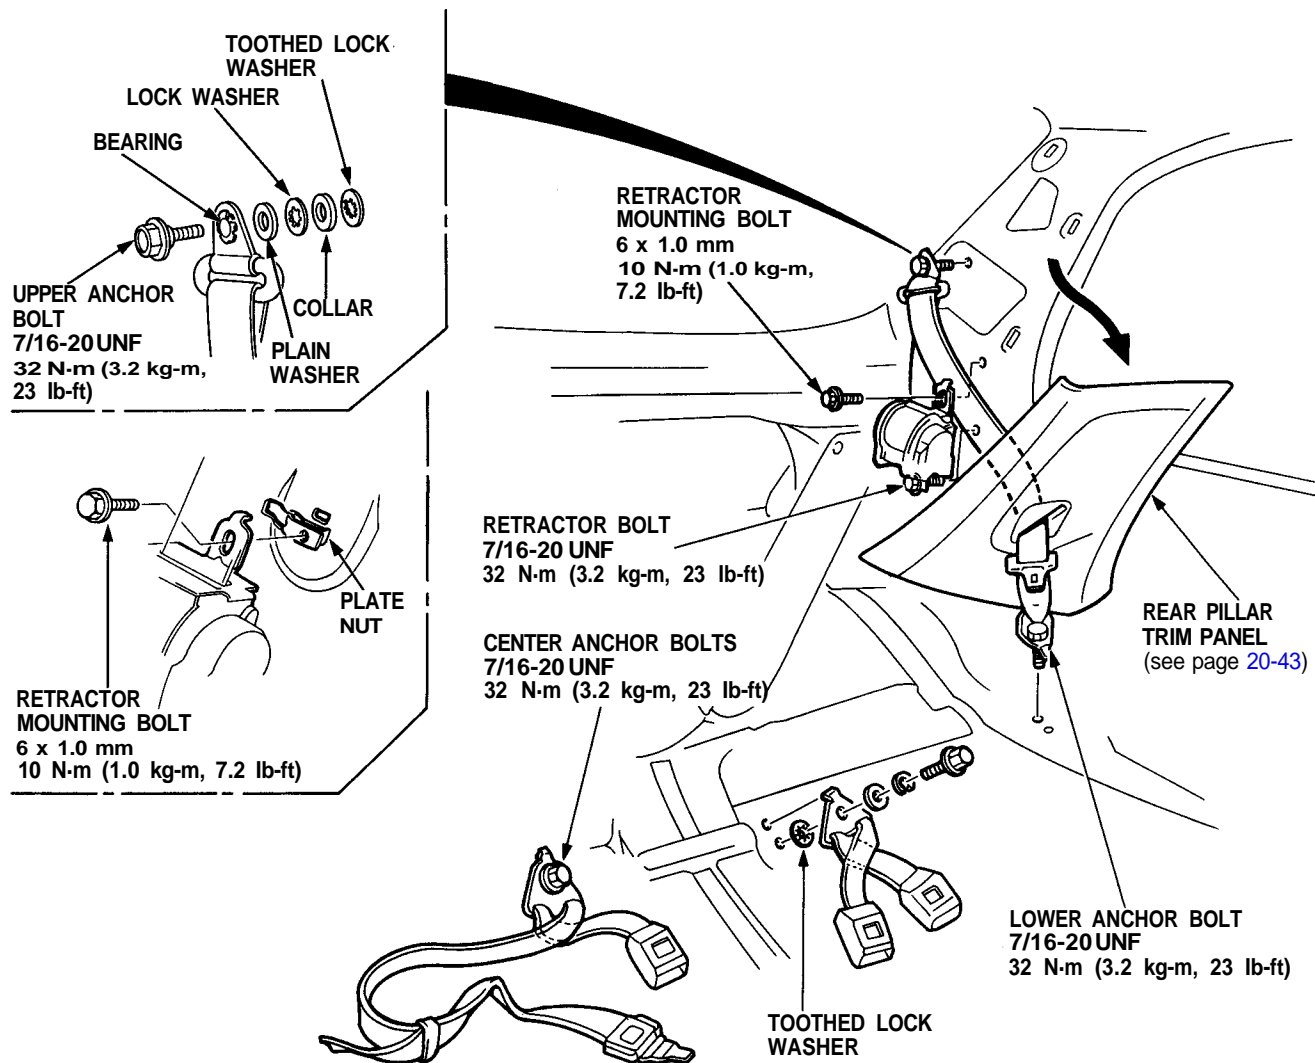

4. Check that the retractor locking mechanism functions as described on page [20-71](#).

NOTE: When storage of the seat belts is necessary, store them in a place free from water, oil, grease, heat and direct sunlight.

5. Installation is the reverse of the removal procedure.

NOTE: Before reinstalling the rear pillar trim panel and rear seat, make sure there are no twists or kinks in the seat belt.