



Bumpers


Front Bumper Replacement

CAUTION: Wear gloves to remove and install the front bumper.

1. Remove the right and left front turn signal lights.
2. Remove the two bumper mounting bolts on each side.
3. Remove the four lower skirt bolts and two lower skirt clips.
4. Lift and remove the front bumper by sliding it forward.



NOTE:

- An assistant is helpful when removing the front bumper.
- Take care not to scratch the front bumper.
- When removing the clips, loosen the screw, then remove the clips with a clip remover.

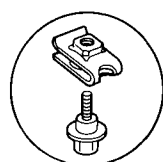


○: Lower skirt bolt locations ,4


►: Lower skirt clip locations ,2

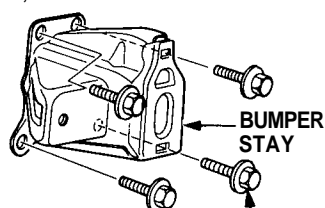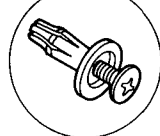

8 x 1.25 mm
22 N·m
(2.2 kg-m,
16 lb-ft)

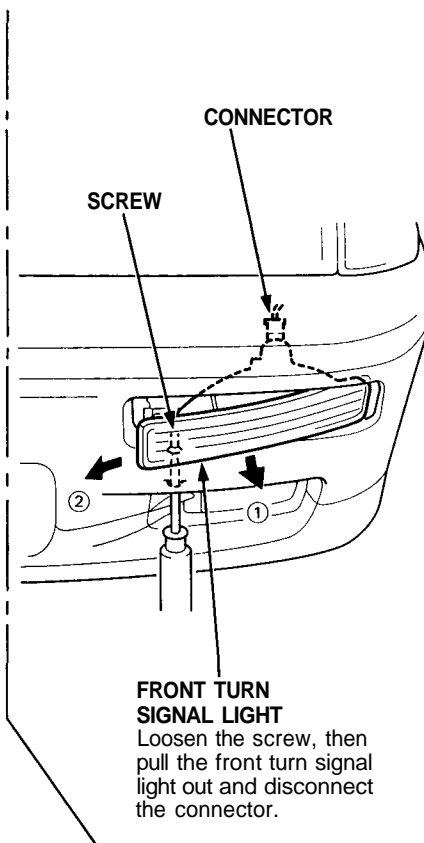

FRONT TURN SIGNAL LIGHT
Loosen the screw, then pull the front turn signal light out and disconnect the connector.

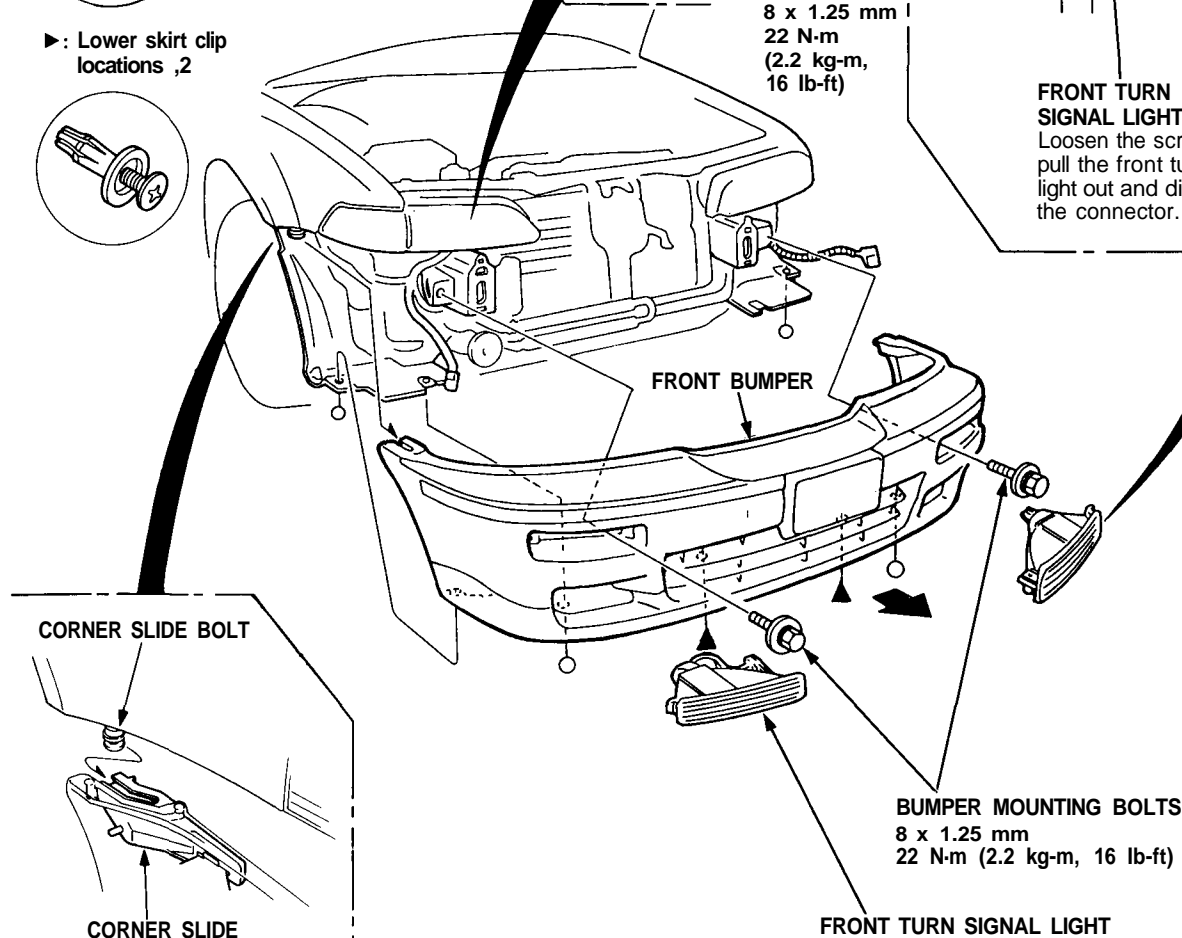

BUMPER MOUNTING BOLTS
8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

5. Installation is the reverse of the removal procedure.

NOTE: To install, insert the corner slide bolts into the corner slides.