



Hood/Opener and Latch

Replacement/Adjustment

●: Clip locations ,18 ●: Clip locations ,5 ►: Clip locations ,4

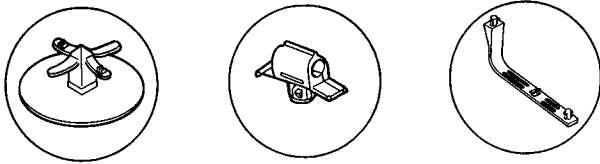


NOTE: An assistant is helpful when removing the hood.

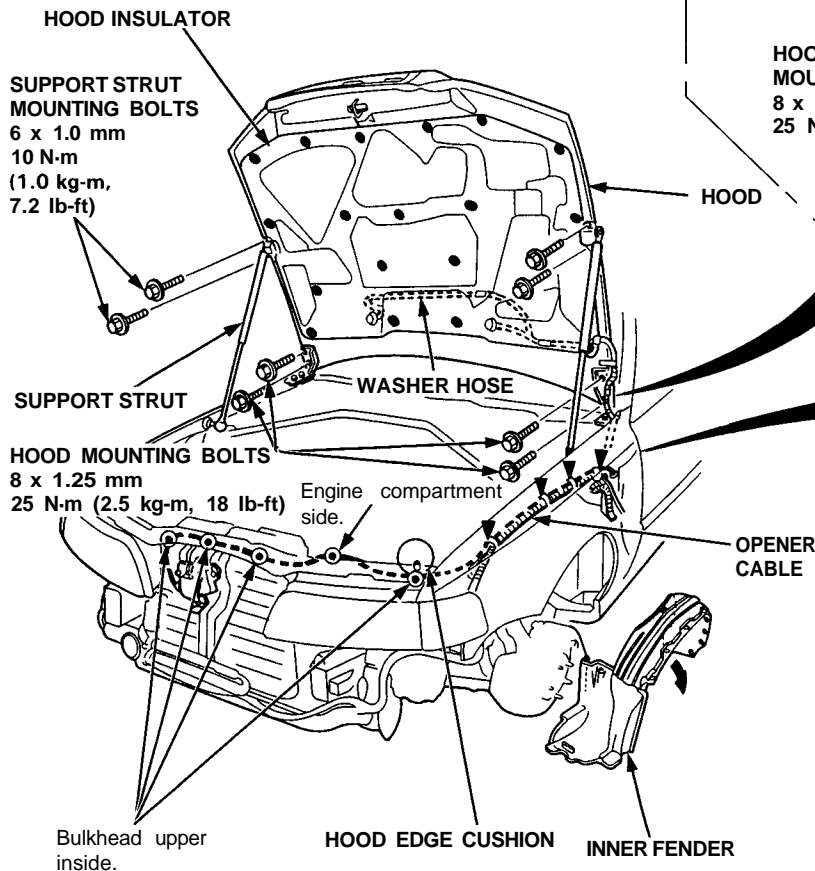


ALIGNMENT:


- The hood hinges can be adjusted right and left as well as fore and aft by using the elongated holes.

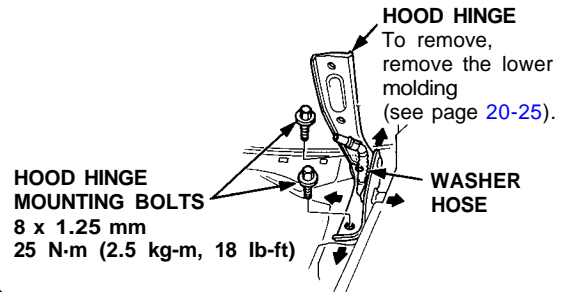

HOOD RELEASE HANDLE

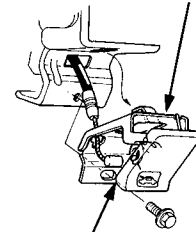


This bolt also secures the dashboard lower cover (see page 20-77).

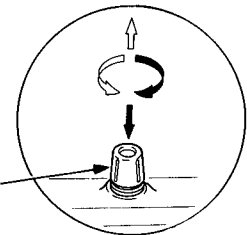

HOOD EDGE CUSHION

Turn as necessary to make the hood fit flush with the body at front and side edges.

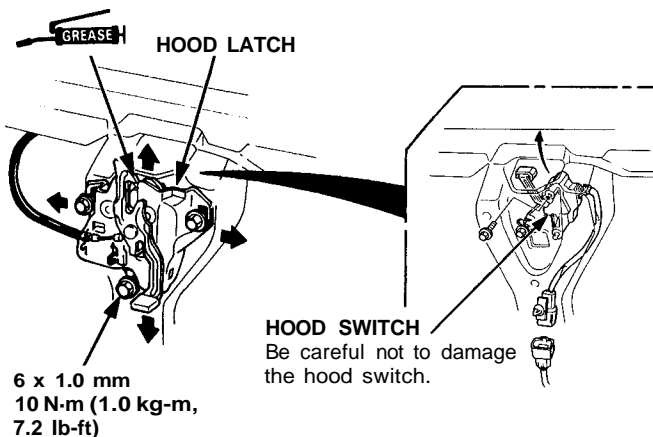

NOTE:

- Before pulling out the opener cable, tie a string to the cable so you can pull it back in later.
- Take care not to bend the opener cable.
- When scrapping the support strut, dispose it as described under the Support Strut Disposal.

Installation is the reverse of the removal procedure.

NOTE:

- Make sure the opener cable is routed and connected properly.
- Align the hood with the body.