




Support Strut Disposal

⚠ WARNING The support strut contains nitrogen gas and oil under pressure.

The pressure must be relieved before disposal to prevent explosion and possible injury when scrapping.

Place the support strut on a level surface with its rod extended and drill a hole of 2—3 mm (3/32") diameter in the body to release the gas.

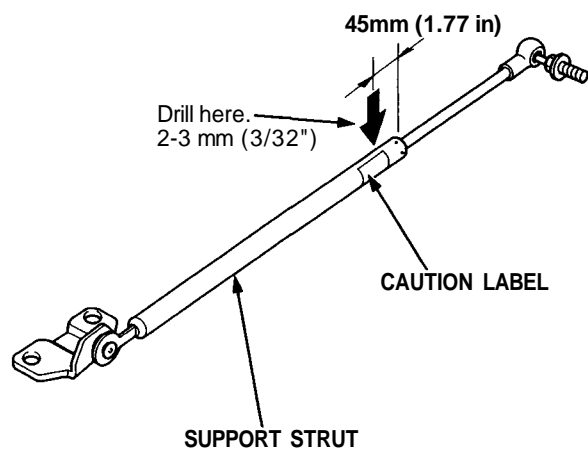

⚠ WARNING Always wear eye protection to avoid getting metal shavings in your eyes when relieving the gas pressure.