

Trunk Lid

Replacement/Adjustment

NOTE:

- An assistant is helpful when removing the trunk lid.
- Before pulling out the wire harness, tie a string to the end of it so you can pull it back in later.

1. Remove the clips, then remove the trunk lid inner trim panel.
2. Disconnect the connectors, then remove the wire harness.
3. Remove the trunk lid mounting bolts, then lift off the trunk lid.
4. Remove the torsion bar using a torsion bar assembly tool.
5. Remove the rear shelf (see page 20-43) ('91-'92) ('93-'95).
6. Remove the hinge mounting bolts, then remove the hinges.
7. Installation is the reverse of the removal procedure.



NOTE:

- Make sure the connector is connected properly.
- Align the trunk lid with the body.

► : Clip locations

A ►, 14

B ►, 1

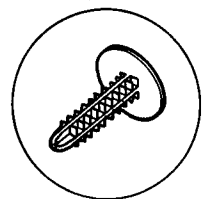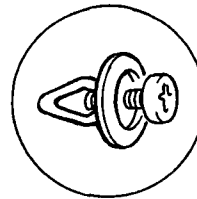


HINGE MOUNTING BOLTS

6 x 1.0 mm

10 N-m (1.0 kg-m, 7.2 lb-ft)


Take care not to hit the rear window when removing.

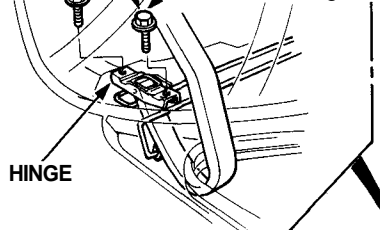

HINGE

TRUNK LID EDGE CUSHION

Turn as necessary to make the trunk lid fit flush with the body at the rear and side edges.

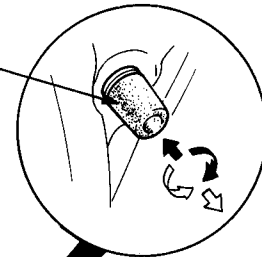

TRUNK LID LATCH


CLIPS

TRUNK LID MOUNTING BOLTS

6 x 1.0 mm

10 N-m (1.0 kg-m, 7.2 lb-ft)


TRUNK LID INNER TRIM PANEL

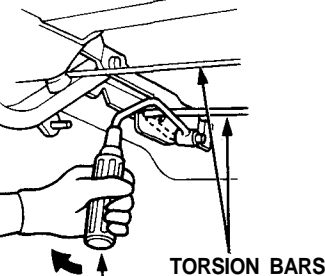

TORSION BAR ASSEMBLY TOOL

TORSION BARS

 Adjust the torsion bars fore or aft with the torsion bar assembly tool as shown.

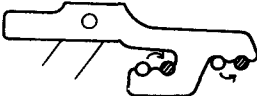

○ = Normal position
● = Higher tension

WIRE HARNESS

TORSION BAR CENTER CLIP

STRIKER MOUNTING BOLTS

6 x 1.0 mm

10 N-m (1.0 kg-m, 7.2 lb-ft)

STRIKER

Adjust the striker right or left to align it with the trunk lid latch.

STRIKER COVER