




Trunk Lid Latch/Fuel Lid Opener and Latch/Opener Cable

Trunk Lid Latch Replacement

NOTE:

- To remove the trunk lid latch, first remove the trunk lid inner trim panel.
- After installing, adjust the trunk lid striker.

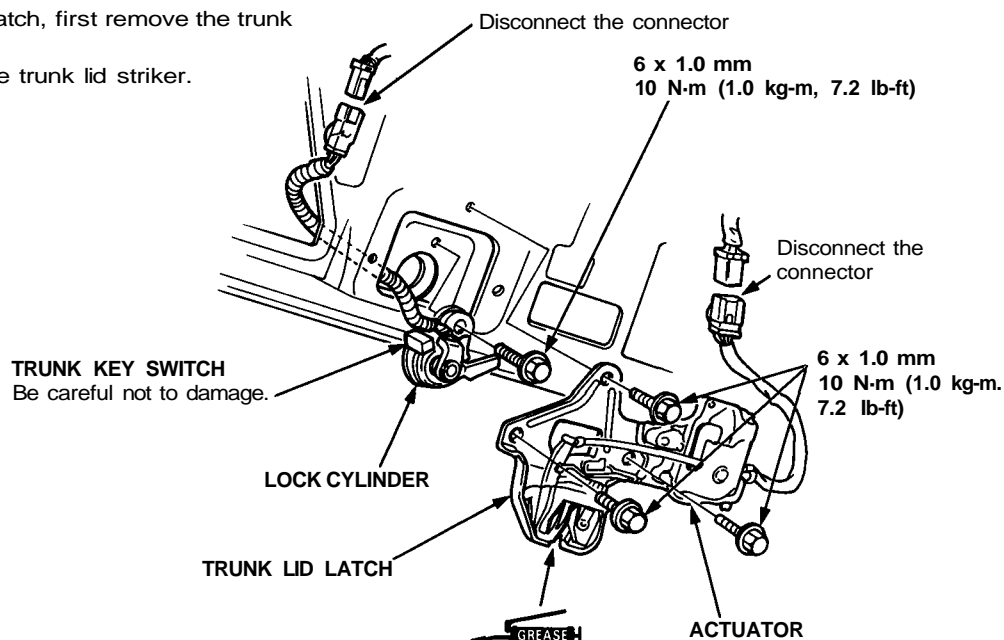

Fuel Lid Opener and Latch/Opener Cable Replacement

