




# Heater Control Panel

## Removal

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see [section 23](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damage wiring.

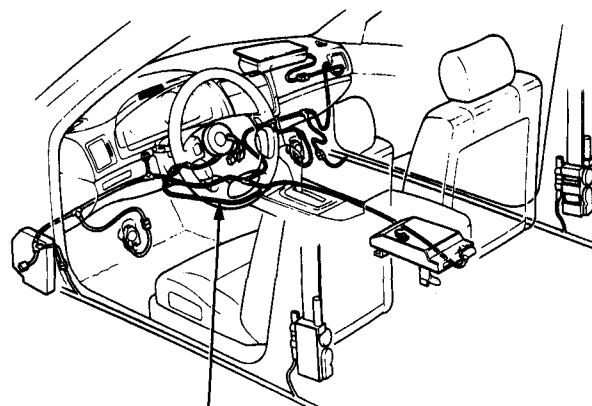

**SRS MAIN HARNESS**  
(Covered with yellow outer insulation)

1. Remove the radio/cassette player (see [section 23](#)).

NOTE: The L and LS model radios may have a coded theft protection circuit. Be sure to get the customer's code number before:

- Disconnecting the battery.
- Removing the No. 56 (7.5A) fuse in the under-hood fuse/relay box.
- Removing the radio.

After service reconnect power to the radio and turn it on. When the word "CODE" is displayed, enter the customer's 5-digit code to restore radio operation.

2. Remove the screws then disconnect the heater control panel.
3. Remove the heater control panel assembly by pushing the clips down as shown.

**CAUTION:** Be careful not to damage the center air vent and dashboard.

