


# Troubleshooting

## Heater-Evaporator Illustrated Index

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see [section 23](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damage wiring.

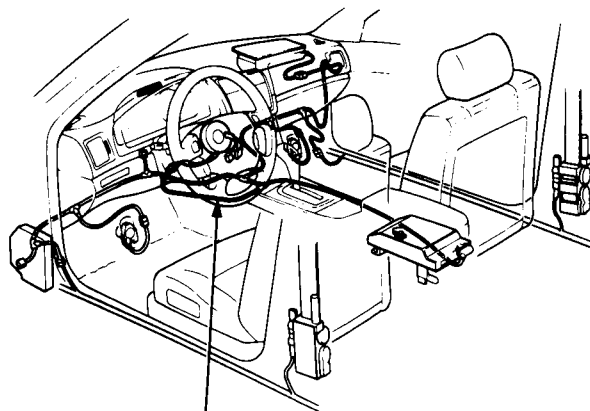

**SRS MAIN HARNESS**  
(Covered with yellow outer insulation)

