

# Troubleshooting

## Flowchart — Compressor

Compressor clutch does not engage.

Remove the compressor clutch relay from the under-hood relay box C.

Turn the ignition switch ON.

Measure voltage between the No. ④ terminal (+) and body ground (-).

Is there battery voltage?

YES

Measure voltage between the No. ③ terminal (+) and body ground (-).

Is there battery voltage?

YES


Turn the ignition switch OFF.


To page 21-37

NO

Repair open in the YEL/BLK wire between the compressor clutch relay in the under-hood relay box C and the No. 3 (15A) fuse in the under-dash fuse/relay box.

NO

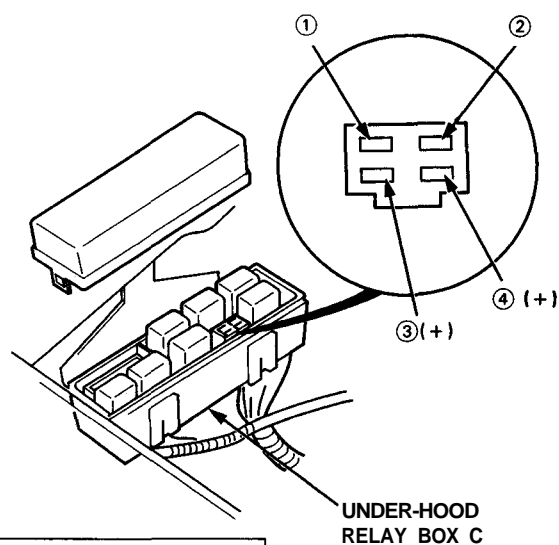


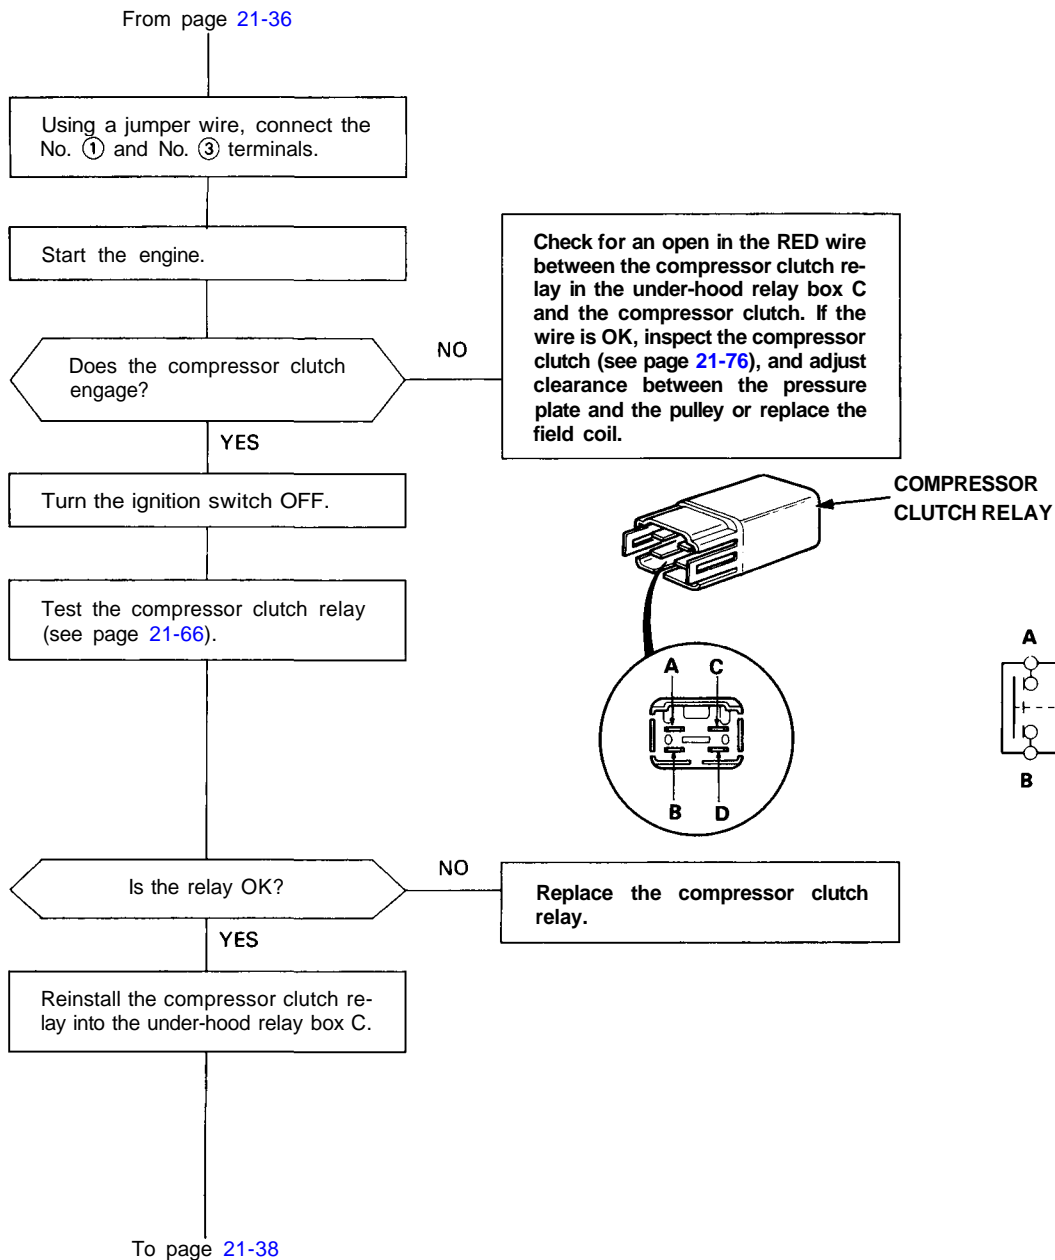


(cont'd)

# Troubleshooting

## Flowchart — Compressor (cont'd)

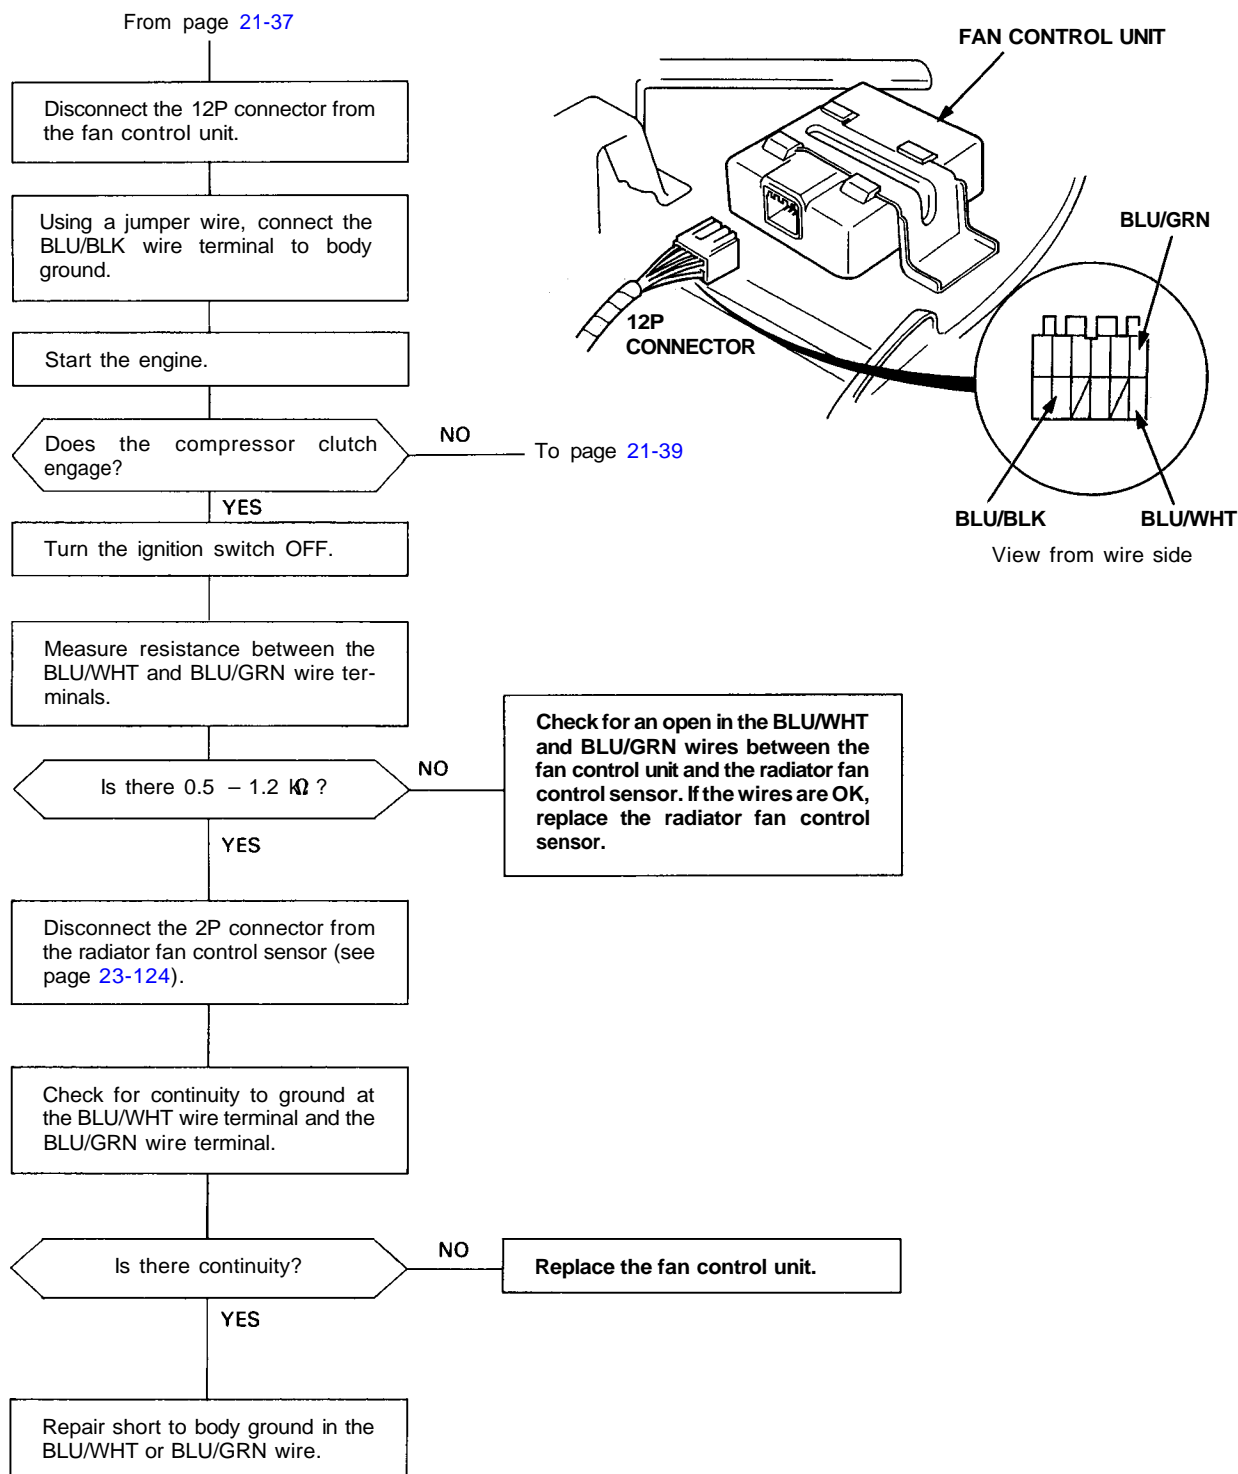

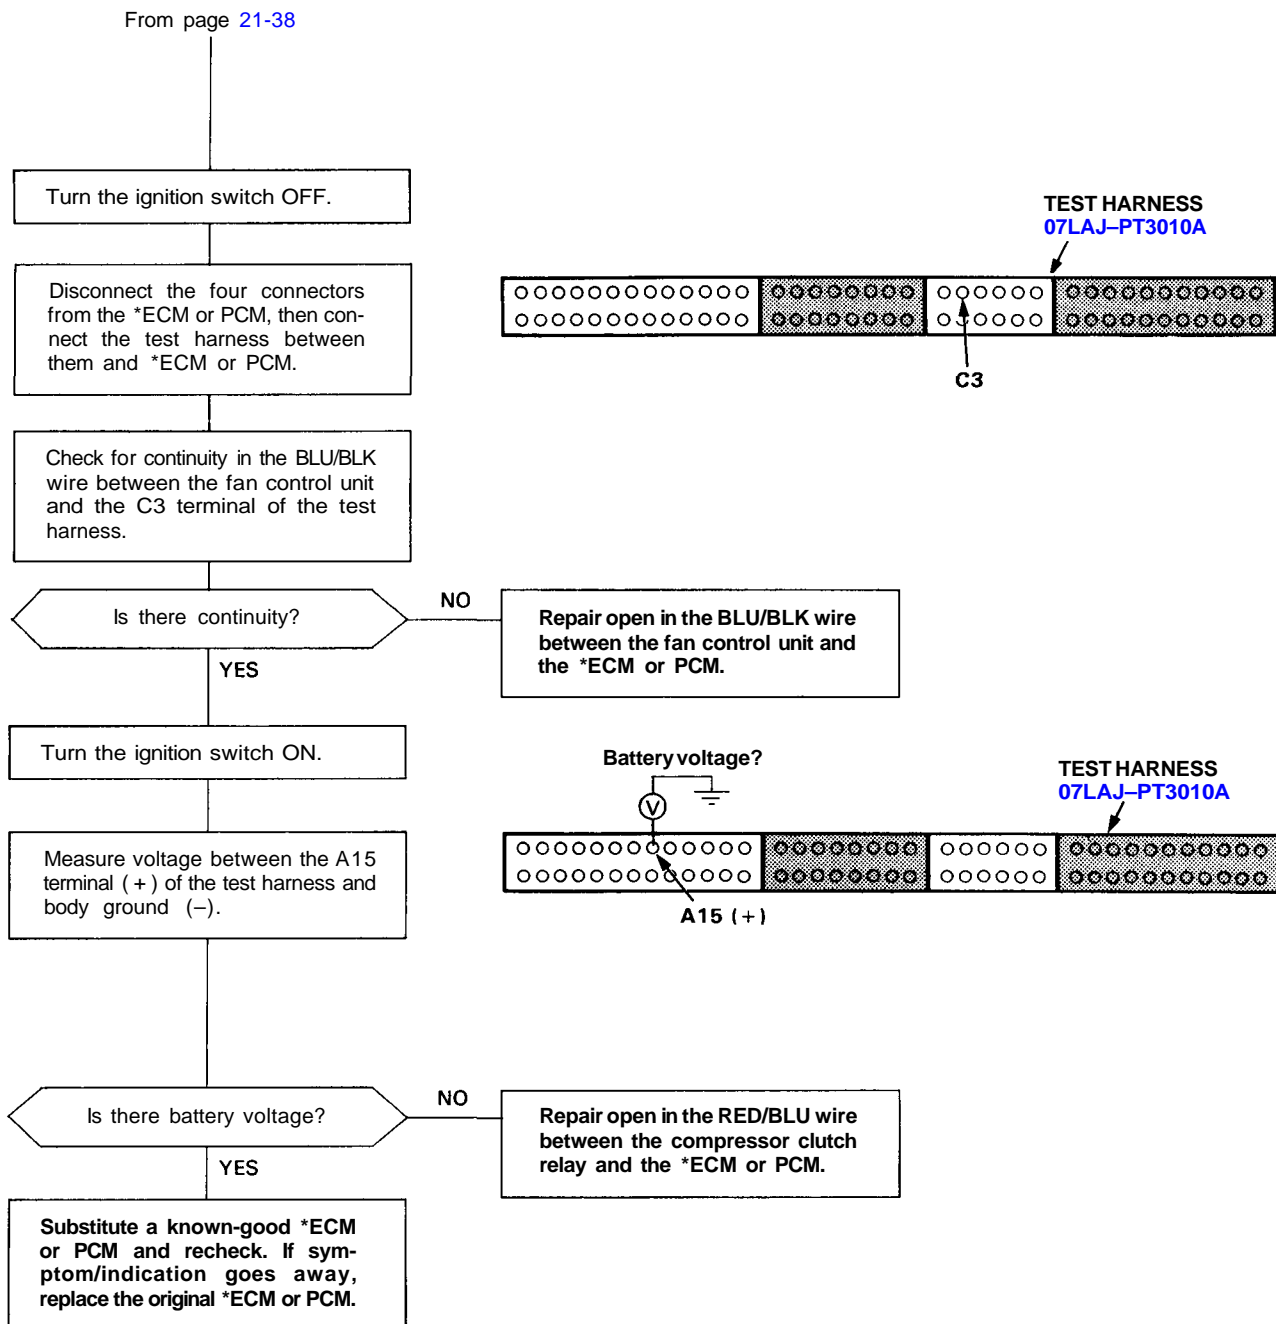

\*ECM for M/T  
PCM for A/T