

Troubleshooting

Flowchart — Both Fans Low Speed

Both fans do not run at low speed, but run OK on high.

Disconnect the 12P connector from the fan control unit.

Turn the ignition switch ON.

Using a jumper wire, connect the BLU/YEL wire terminal to body ground.

Do the both fans run at low speed?

YES — To page 21-53

NO

Disconnect the 8P connector from the radiator fan control module.



Check for continuity in the BLU/YEL wire between the radiator fan control module and the fan control unit.

Is there continuity?

NO — Repair open in the BLU/YEL wire between the radiator fan control module and the fan control unit.

YES

Substitute a known-good radiator fan control module and retest. If the symptom/indication goes away, replace the original radiator fan control module.

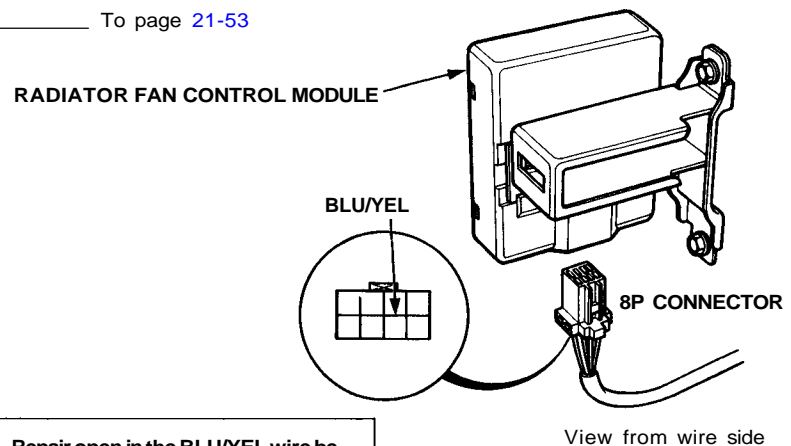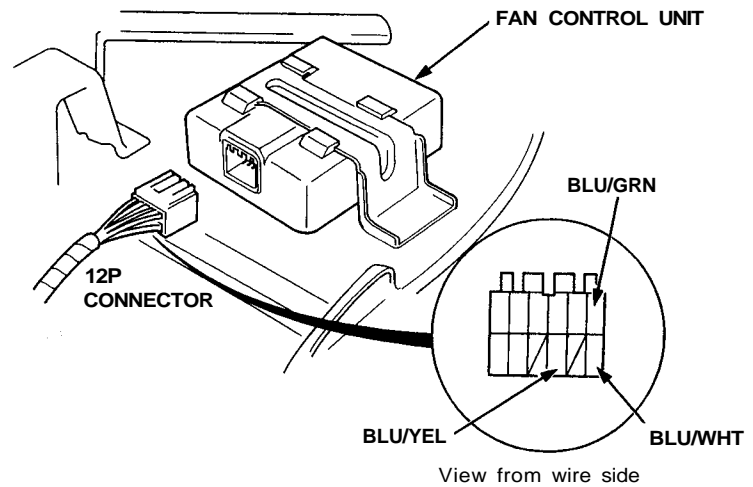



From page 21-52

