


Blower Unit

Replacement


CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see [section 23](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damage wiring.

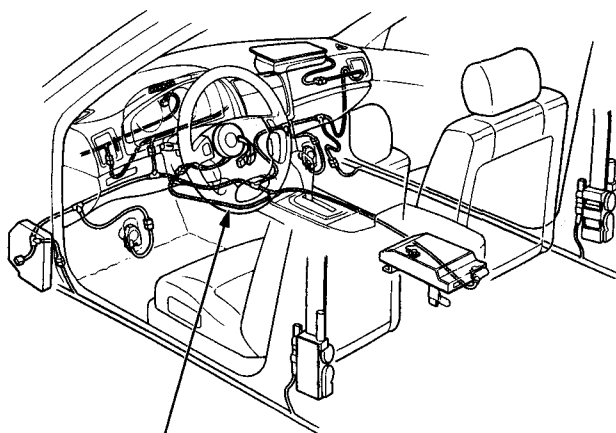


SRS MAIN HARNESS
(Covered with yellow outer insulation.)



1. Remove the glove box lower panel and disconnect the connector from it.

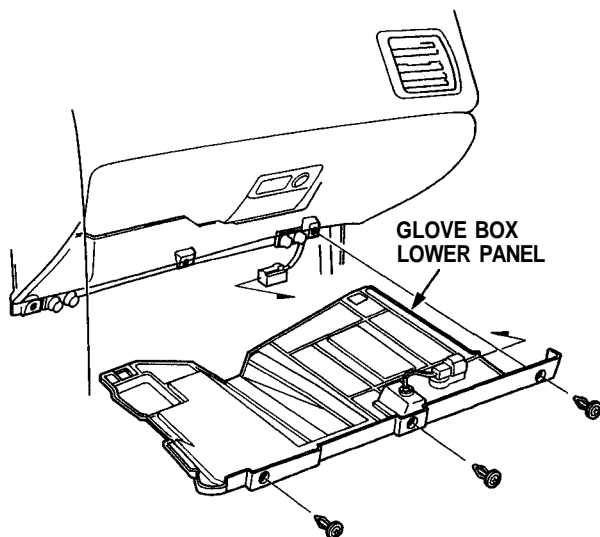

2. Disconnect the glove box light connector and glove box mounting bolts, then remove the glove box.

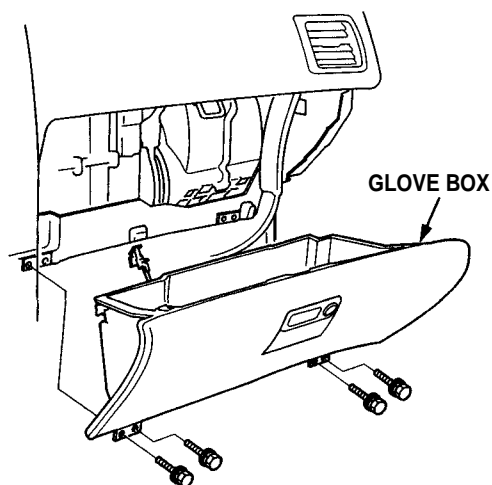


3. Remove the right glove box side cover, the dashboard side cover and the left glove box side cover.

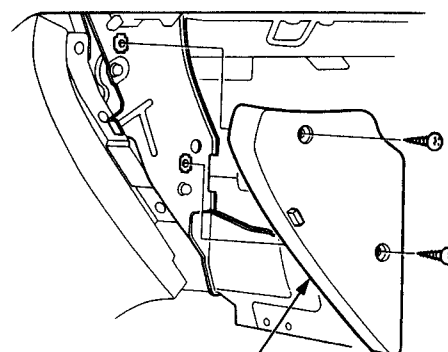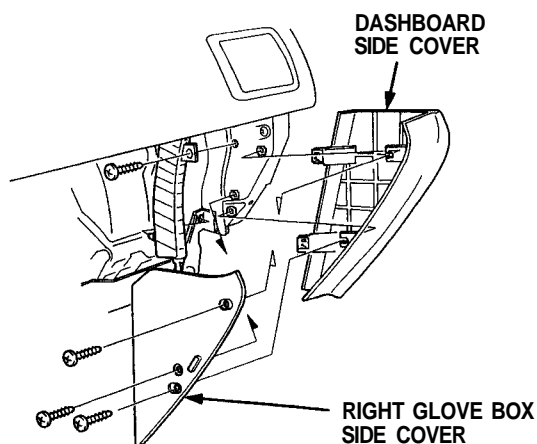




Overhaul

4. Remove the glove box frame mounting bolts, then remove the glove box frame.

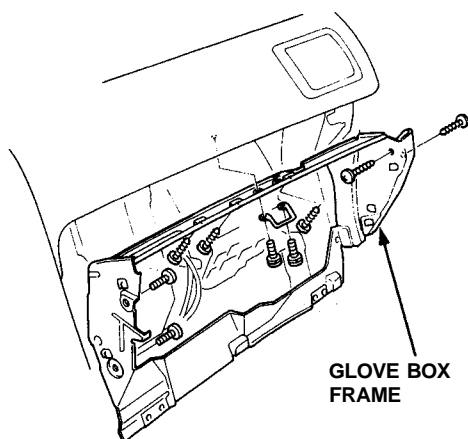

5. Disconnect the connectors as shown.

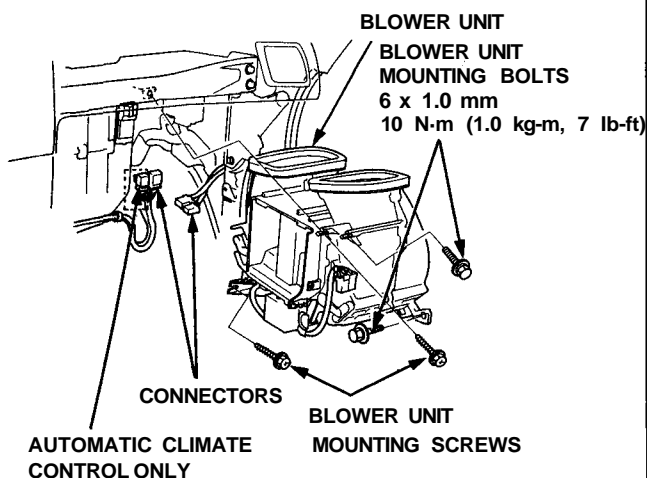

6. Remove the blower unit mounting bolts and screws, then remove the blower unit.
7. Install the blower unit in the reverse order of removal, then make sure it runs and doesn't leak any air.

