


A/C Filter

Replacement

1. Remove the glove box and glove box frame (see page 21-54).
2. Remove the screws and bracket then remove the A/C filter

- Replace the A/C filter every 15,000 miles (24,000 km) or 12 months whichever comes first.

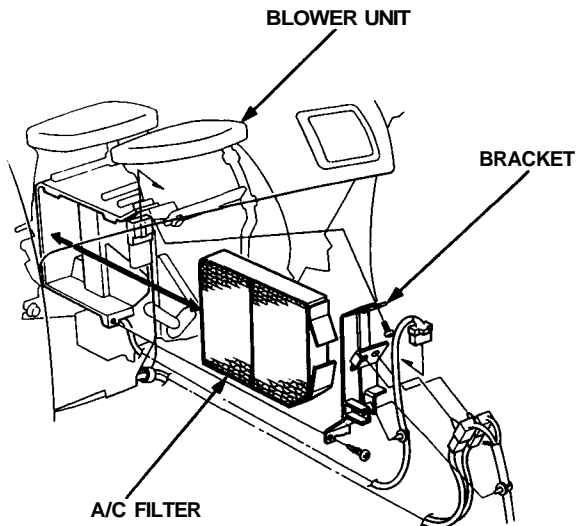

- Install the A/C filter in the reverse order of removal, then doesn't leak any air.

Power Transistor


Test

NOTE: The power transistor cannot be tested with ordinary circuit testers. If the blower motor does not operate and you feel that the problem may be the power transistor, test it as described below.

1. Check the blower motor and its wire harness.
 - If they are not OK, repair or replace them as necessary, then retest.
 - If they are OK, go to step 2.
2. Disconnect the connector from the power transistor. Disconnect the LT GRN/BLK lead from the connector and connect a 1.2–3.4 Watt bulb as shown. Then reconnect the connector to the power transistor.

CAUTION:

- To avoid a loose or disconnected terminal, be careful not to damage the locking tab when disconnecting and connecting the terminal.
- Insulate the LT GRN/BLK lead terminal from the body until the testing is completed.

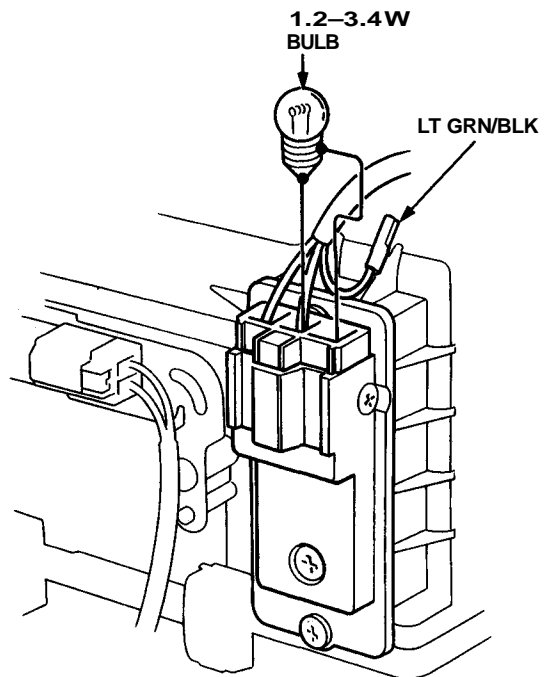

3. Turn the ignition switch on.
 - If the blower motor now operates, the controller is faulty. Replace it and retest.
 - If the blower motor still does not operate, the power transistor is faulty. Replace it and retest.