



Belt Adjustment

1. Loosen the idler pulley center nut and adjusting bolt.
2. Adjust the A/C compressor belt tension by turning the adjusting bolt.
3. Tighten the idler pulley center nut, then tighten the adjusting bolt securely.
 - "New belt" refers to a belt which has been used less than five minutes on a running engine.
 - "Used belt" refers to a belt which has been used on a running engine for five minutes or more.

NOTE: Check for belt damage. If necessary, replace the A/C compressor belt.

Belt movement under a force of 100 N (10 kg, 22 lbs)	
New belt	Used belt
0.20–0.26 in (5.0–6.5 mm)	0.31–0.39 in (8.0–10.0 mm)

Measure with belt tension gauge	
New belt	Used belt
800–1000 N (80–100 kg, 176–220 lbs)	400–600 N (40–60 kg, 88–132 lbs)

