



Function Selection and Operation Check

This check will quickly and automatically select and operate all functions of the climate control system, in the combinations and sequence shown below. It may help clarify a problem, or identify one that didn't shown up when you perform the self-diagnosis circuit check.

Push in both the MODE and AUTO buttons and hold them in while you start the engine. The climate control unit will then automatically run the check in eight steps, one step every five seconds.

To stop at one of those steps, push the FAN button; to continue, push it again for each step after that.

Pushing the OFF button or turning the ignition switch OFF, will turn off the check.

Check the temperature, volume, and source of the air flow, and compare it to what the chart shows it should be.

