




# Aspirator Fan Motor

## Removal

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see [section 23](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

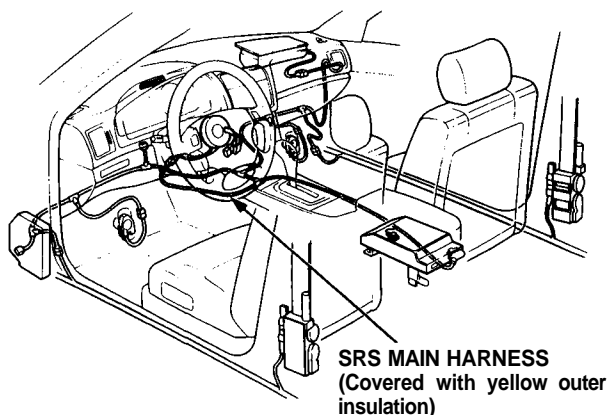


1. Remove the climate control unit (see page [22-6](#)).

NOTE: The L and LS model radios may have a coded theft protection circuit. Be sure to get the customer's code number before:

- Disconnecting the battery.
- Removing the No. 56 (7.5A) fuse in the underhood fuse/relay box.
- Removing the radio.

After service reconnect power to the radio and turn it on. When the word "CODE" is displayed, enter the customer's 5-digit code to restore radio operation.

2. Disconnect the aspirator fan connector as shown.

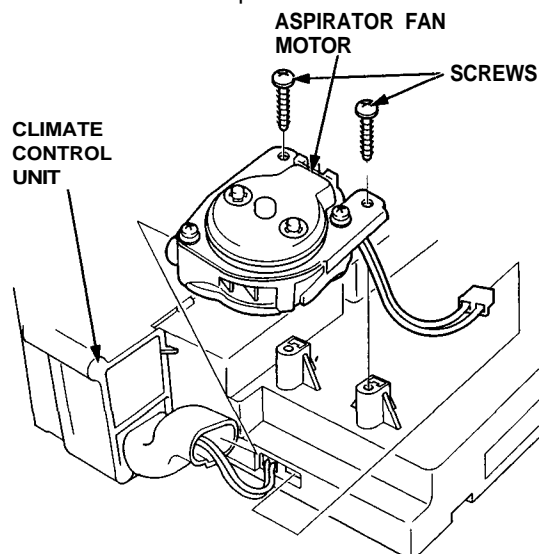

3. Remove the mounting screws, then remove the aspirator fan motor.

## Test

Connect battery power to the No. 1 terminal of the connector, and connect the No. 3 terminal to ground. The fan should run.

