




# Sunlight Sensor

## Removal

With a small screwdriver, carefully pry the sunlight sensor out of the dashboard and disconnect its connector.

NOTE: Protect the dashboard; cover it with a shop towel before you pry against it.

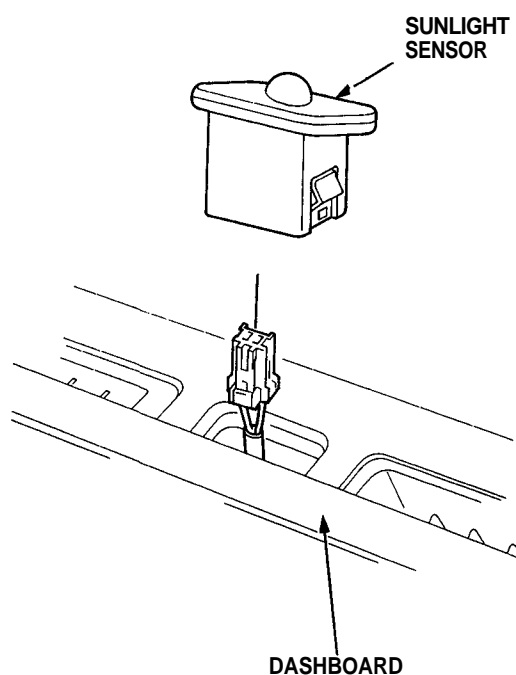

## Test

Measure the voltage between the terminals with the sensor out of direct sunlight.

- The voltage should be  $1.4 \pm 0.2$  V.

