


# Ignition Switch

Test


1. Remove the dashboard lower cover (see page 23-79).

2. Disconnect the 7-P connector from the under-dash fuse/relay box.

3. Check for continuity between the terminals in each switch position according to the table.

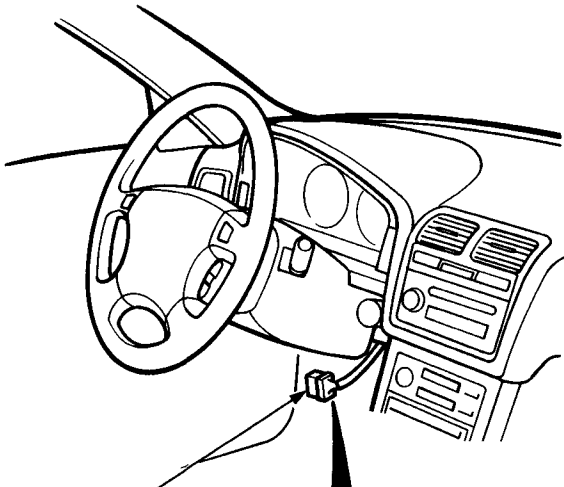

7-P CONNECTOR

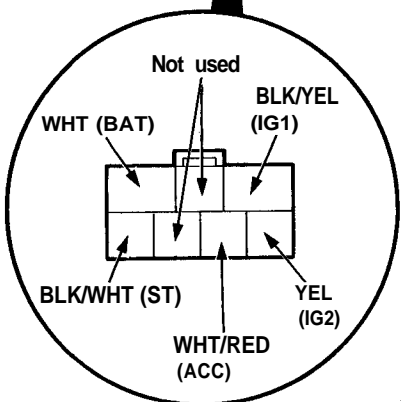

View from wire side

Terminal Position	WHT/ RED (ACC)	WHT (BAT)	BLK/ YEL (IG1)	YEL (IG2)	BLK/ WHT (ST)
0					
I					
II					
III					


Electrical Switch Replacement

1. Remove the dashboard lower cover (see page 23-79).

2. Disconnect the 7-P connector from the under-dash fuse/relay box.

3. Insert the key and turn it to "0".

4. Remove the two screws and replace the switch.

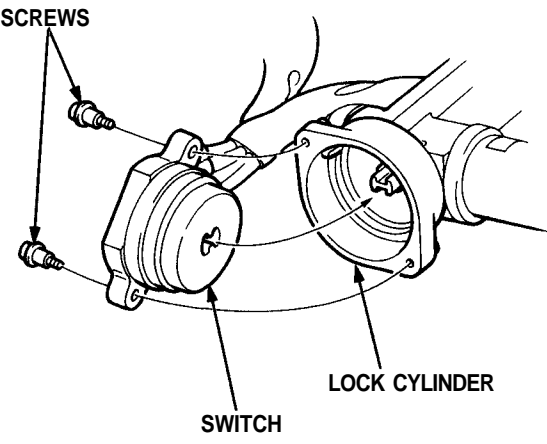

SCREWS

LOCK CYLINDER

SWITCH

23-78