


Starting System


Clutch Interlock Switch Test (M/T)

- 1. Pry the courtesy light controller and TCS switch (LS) out from the dashboard lower cover.


NOTE: Be careful not to damage the controller and TCS switch (LS) or the dashboard lower cover.

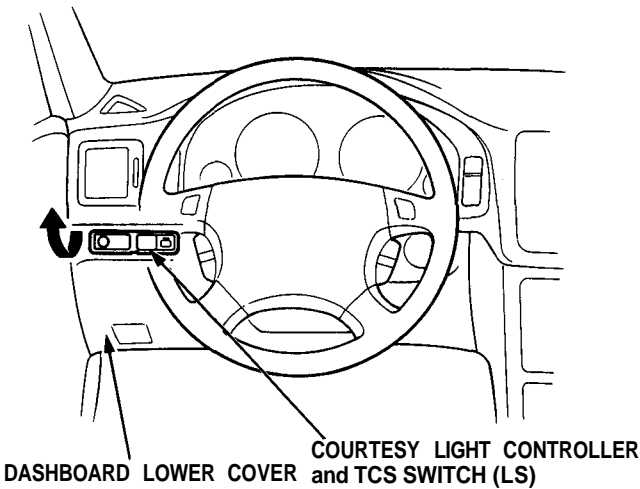

- 2. Disconnect the connectors from the courtesy light controller and TCS switch (LS).
- 3. Remove the dashboard lower cover.

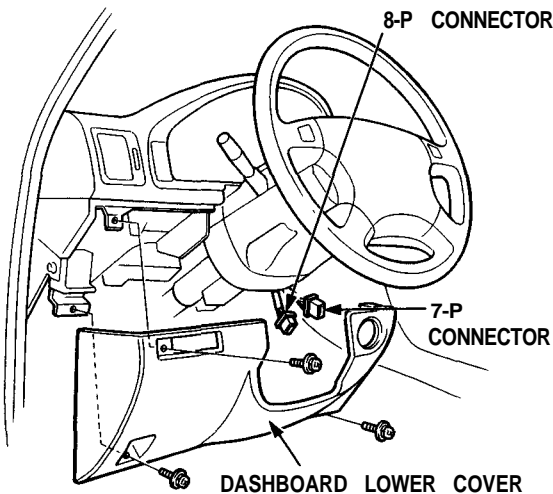

- 4. Disconnect the 2-P connector from the switch.

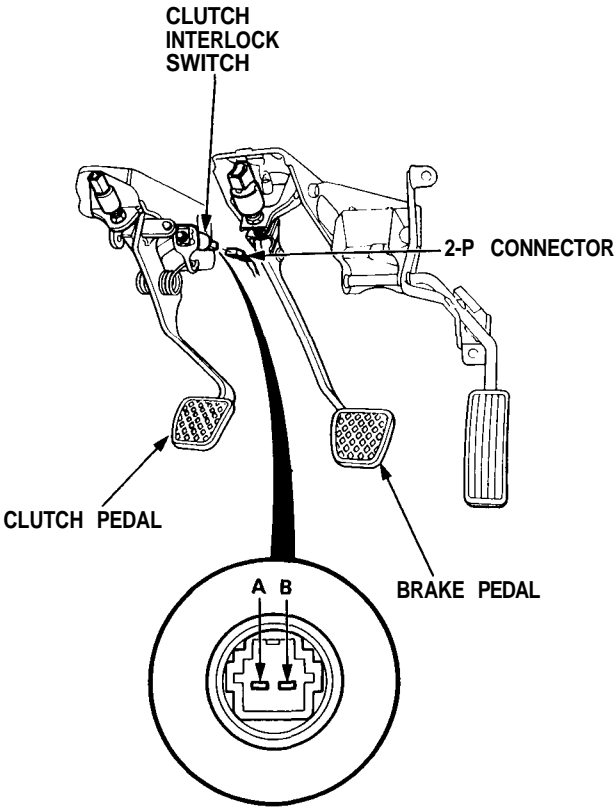

- 5. Check for continuity between the terminals according to the table.

Terminal	A	B
Clutch Pedal		
RELEASED		
PUSHED		

- 6. If necessary, replace the switch or adjust the switch position (see [section 12](#)).