




## Control Unit Terminals


FAN CONTROL UNIT

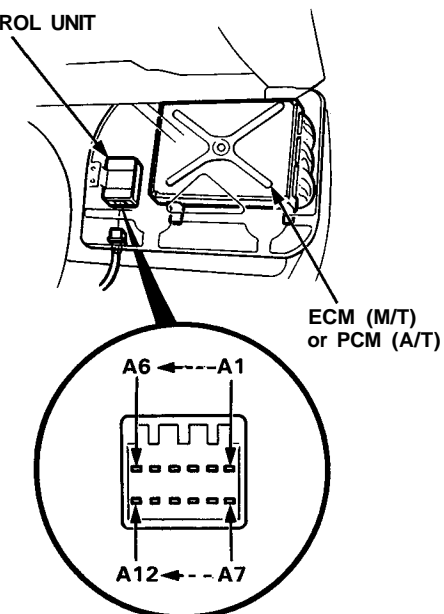

Terminal	Wire	Connects to
A1	BLU/GRN	Radiator fan control sensor ⊖
A2	BLU	Radiator fan and radiator fan main relays (Coil ⊖)
A3	LT BLU	A/C triple pressure switch A
A4	BLK	Ground (G301, G302, G303)
A5	—	Not used
A6	RED/BLU	A/C triple pressure switch B
A7	BLU/WHT	Radiator fan control sensor ⊕
A8	—	Not used
A9	BLU/YEL	Radiator fan control module
A10	—	Not used
A11	BLU/BLK	ECM for M/T or PCM for A/T (ACS)
A12	YEL/BLK	IG2 (Main power supply)

## Control Module Terminals

RADIATOR FAN CONTROL MODULE

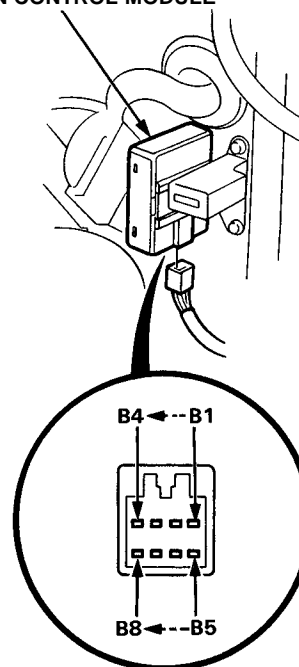

Terminal	Wire	Connects to
B1	BLK	Ground (G301, G302, G303)
B2	BLU/YEL	Fan control unit
B3	BLU/RED	Condenser fan relay ⊕
B4	YEL/BLU	Power supply (For condenser fan relay with ignition switch ON)
B5	GRN	Condenser fan relay ⊖
B6	BLK/RED	Power supply (For condenser fan relay with ignition switch OFF)
B7	—	Not used
B8	ORN	Engine oil temperature sensor