


Radiator and Condenser Fan Controls

Fan Motor Test


1. Disconnect the 2-P connector from each fan motor.
2. Test the motor by connecting battery power to the A terminal and ground to the B terminal.
3. If the motor fails to run or does not run smoothly, replace it.

RADIATOR FAN MOTOR CONDENSER FAN MOTOR

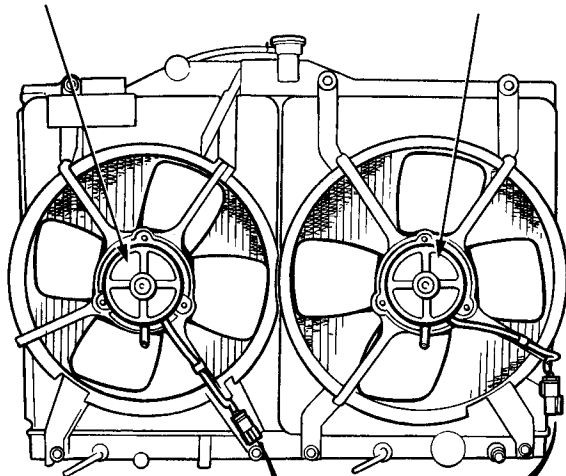

Engine Oil Temperature Sensor Test

1. Remove the engine oil temperature sensor from the cylinder head cover.
2. Suspend the sensor in a container of water as shown.

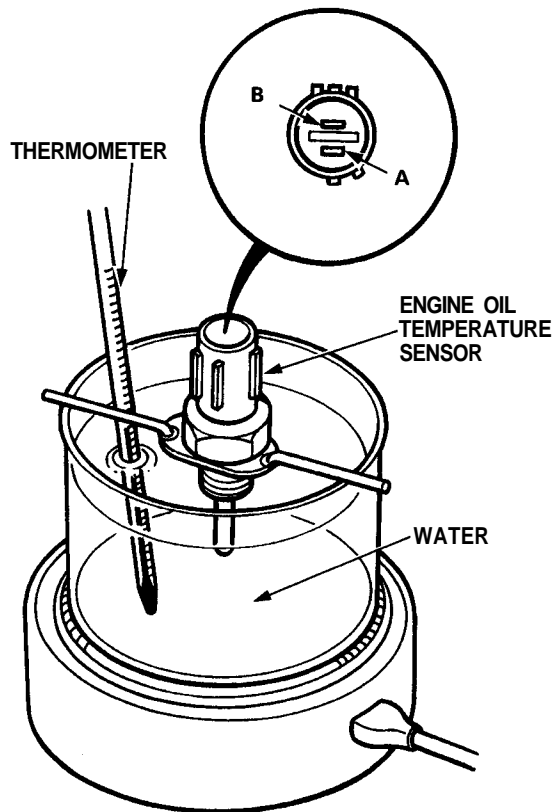

3. Heat the water and check temperature with a thermometer (see table below).
4. Check for continuity between the A and B terminals according to the table.

Terminal		A	B
Temperature			
Above	192 – 203°F (89 – 95°C)	○	○
Below	156 – 185°F (69 – 85°C)		