



## Alternator Overhaul

NOTE: Only if the front bearing needs replacement, it is necessary to separate the pulley, drive end housing, and rotor.

To loosen the pulley locknut, use 10 mm and 22 mm wrenches. If necessary, use an impact wrench.

