




# Gauge Assembly

## Gauge/Indicator Location Index

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- After installing the gauge assembly, recheck the operation of the SRS indicator light.

CONNECTOR "B" (Carries the SRS indicator signal)

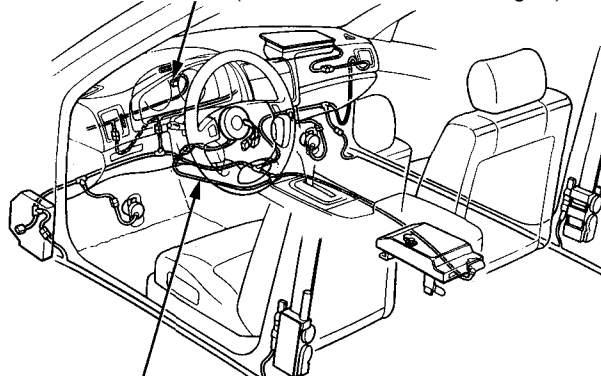

SRS MAIN HARNESS  
(Covered with yellow outer insulation)


### SPEEDOMETER

Indicates 60 mph [60 km/h] at 1026 [637] rpm of the vehicle speed sensor (VSS).


### TACHOMETER

Indicates 100 rpm at 300 pulses per minute of the ignition control module (ICM).

CONNECTOR "A"

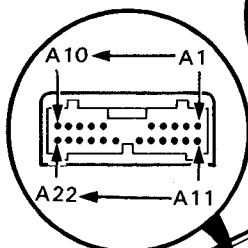


CONNECTOR "B"

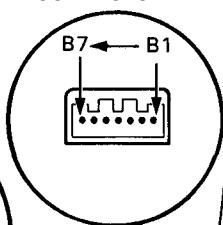

A/T GEAR POSITION  
INDICATOR SYSTEM  
See page 23-150

CONNECTOR "C"

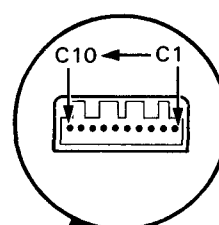


### FUEL GAUGE

Gauge Test, page 23-139  
Sending Unit Test, page 23-140

SAFETY INDICATOR SYSTEM  
See page 23-157

### ENGINE COOLANT TEMPERATURE GAUGE

Gauge Test, page 23-141  
Sender Test, page 23-141

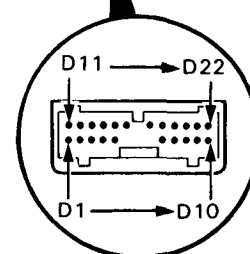

CONNECTOR "D"