


Interlock System

Key Interlock Solenoid Test

- 1. Remove the dashboard lower cover (see page 23-79).
- 2. Disconnect the 8-P connector from the main wire harness.

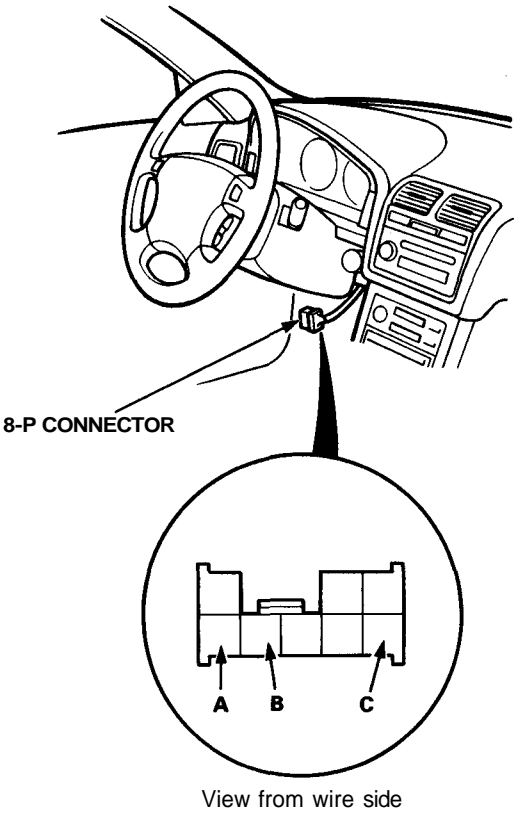

- 3. Check for continuity between the terminals in each switch position according to the table.

Terminal		A	B	C
Position				
Ignition switch ACC (I)	Key pushed in		○ — ○	○
	Key released	○ — ○		

- 4. Check that the key cannot be removed with power and ground connected to the A and C terminals.
- If the key cannot be removed, the key interlock solenoid is OK.
 - If the key can be removed, replace the steering lock assembly (key interlock solenoid is not available separately).