


A/T Gear Position Indicator

Bulb Replacement

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- After installing the gauge assembly, recheck the operation of the SRS indicator light.


CONNECTOR "B" (Carries the SRS indicator signal)

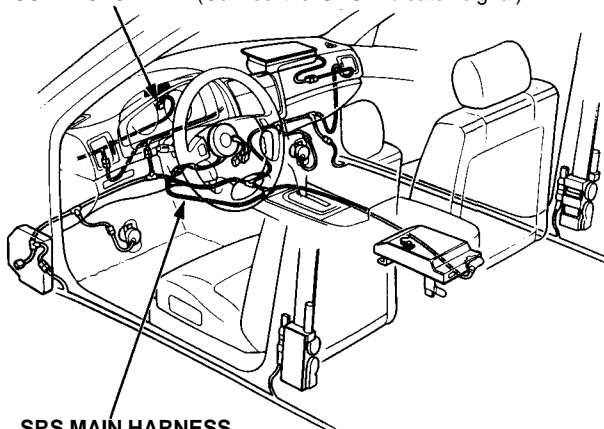

SRS MAIN HARNESS
(Covered with yellow outer insulation)

1. Remove the gauge assembly (see page 23-132).
2. Disassemble the gauge assembly (see page 23-134).

3. Remove the bulb from printed circuit board B.

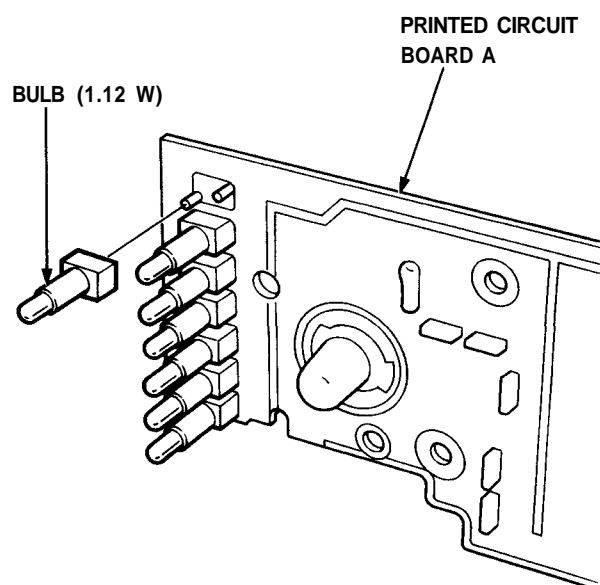

4. Install in the reverse order of removal.