

Safety Indicator

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom	Item to be inspected							
	Blown No. 13 (7.5 A) fuse (In the under-dash fuse/relay box)	Blown No. 57 (15 A) fuse (In the under-hood fuse/relay box)	Safety indicator input test	Blown bulb	Brake light failure sensor	Door switch	Trunk latch switch	Poor ground
No indicator lights come on.	1		2					G301 G302 G303 (G251, G301 '91-'92))
Indicator panel illumination is not on with headlight switch ON.				1				RED/BLK or RED
Indicator lights fail to come on when ignition switch is turned to ON (II).			1					
Door indicator light is not on with doors open.			2			1		GRN/BLU GRN/RED GRN/YEL or GRN/WHT
Trunk indicator light is not on with trunk lid open.		1	3				2	G451
Brake indicator light is not on with blown brake light bulb.			1					
Brake indicator light remains on with good brake light bulbs.			2		1			G451

Bulb Replacement

1. Remove the safety indicator assembly from the gauge housing (see page 23-134).
2. Remove the two screws, then replace the bad bulb.

