


Lighting System

Combination Light Switch Test


CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

1. Remove the dashboard lower cover (see page 23-79).
2. Disconnect the 14-P connector from the main wire harness.
3. Inspect the connector terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, check for continuity between them in each switch position according to the tables.

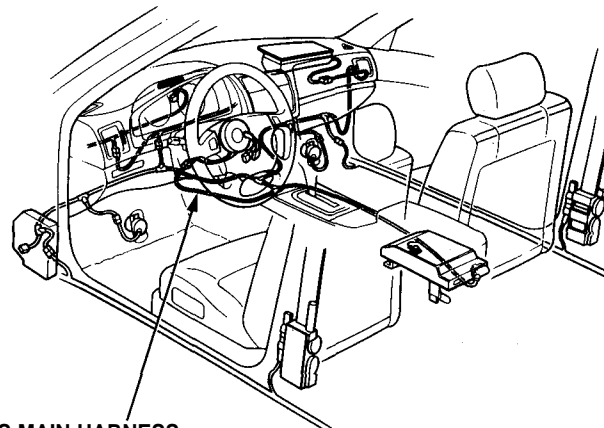


SRS MAIN HARNESS
(Covered with yellow outer insulation)

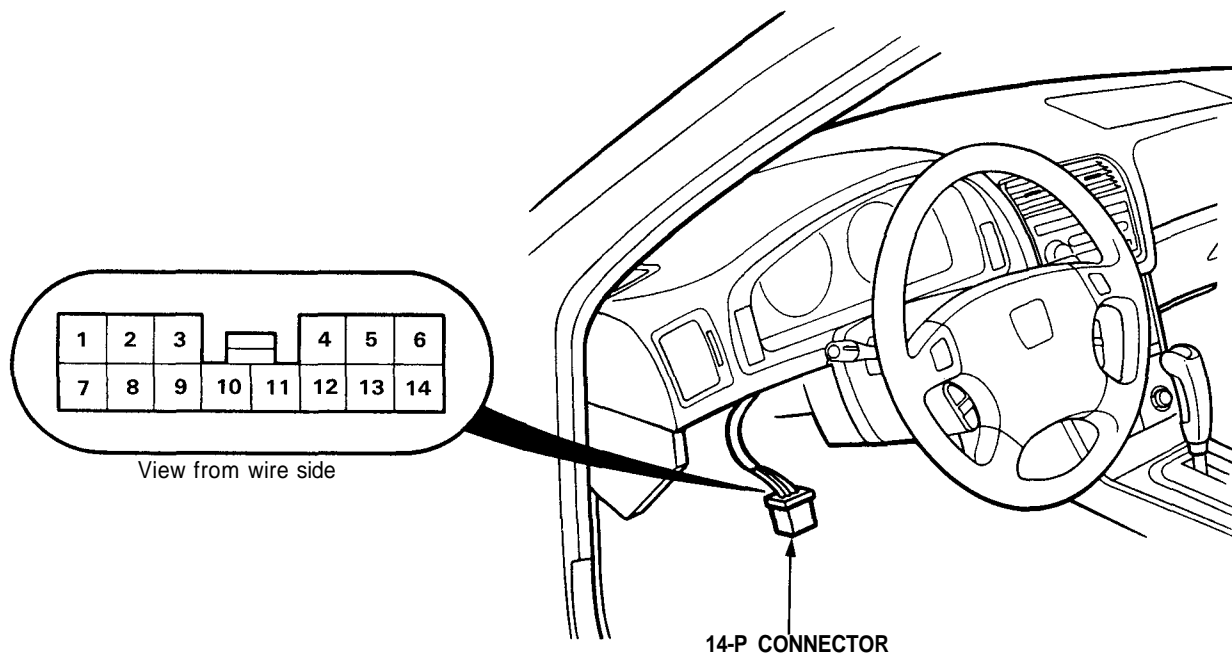




Headlight/Dimmer/Passing Switch:

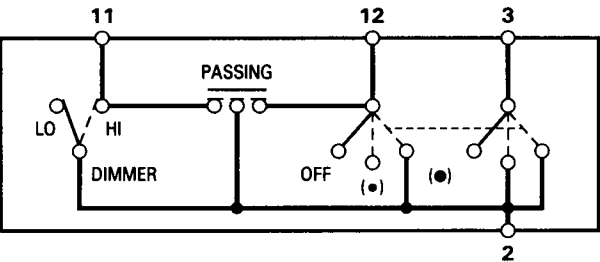

Terminal		2	3	11	12
Position					
Headlight switch	OFF				
	•				
	•				
Dimmer switch	LOW				
	HIGH				
Passing switch	OFF				
	ON				

Turn Signal Switch:

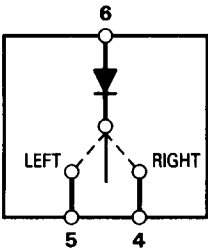

Terminal		4	5	6
Position				
RIGHT				
NEUTRAL				
LEFT				