


Lighting System

Combination Light Switch Replacement


CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page, 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

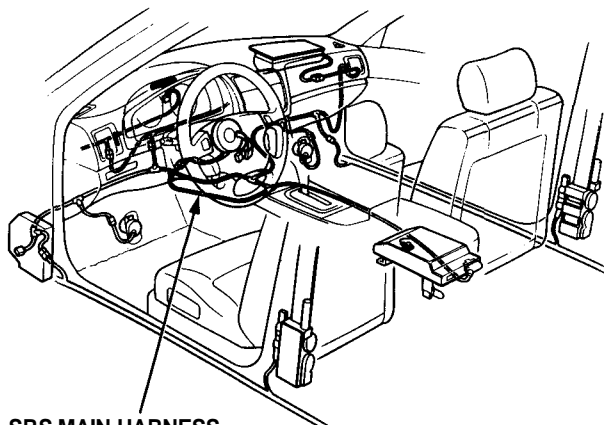

SRS MAIN HARNESS
(Covered with yellow outer insulation)


1. Pry the courtesy light controller and TCS switch (LS) out of the dashboard lower cover.

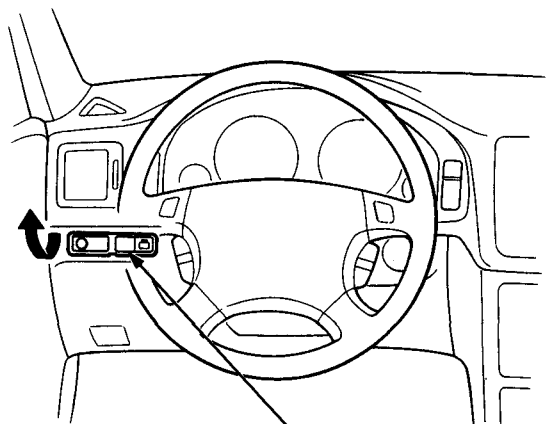

**COURTESY LIGHT CONTROLLER
and TCS SWITCH (LS)**


2. Disconnect the connectors from the controller and TCS switch (LS), then remove the controller and the switch.

3. Remove the three screws and dashboard lower cover.

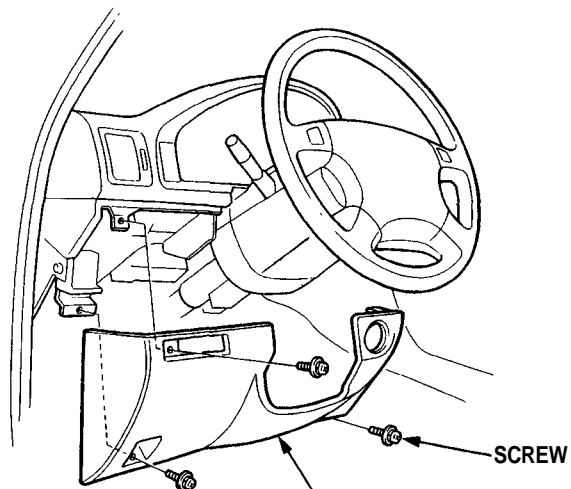

DASHBOARD LOWER COVER

4. Remove the steering column tilt cover.

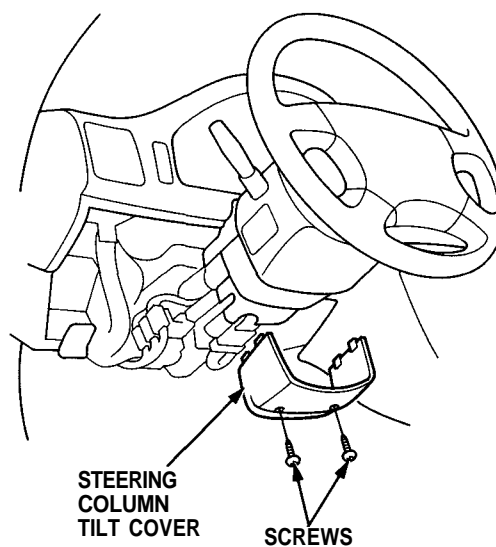

**STEERING
COLUMN
TILT COVER**


SCREWS



Headlights



Adjustment

5. Remove the screws, then remove the steering column covers and disconnect the switch connector.

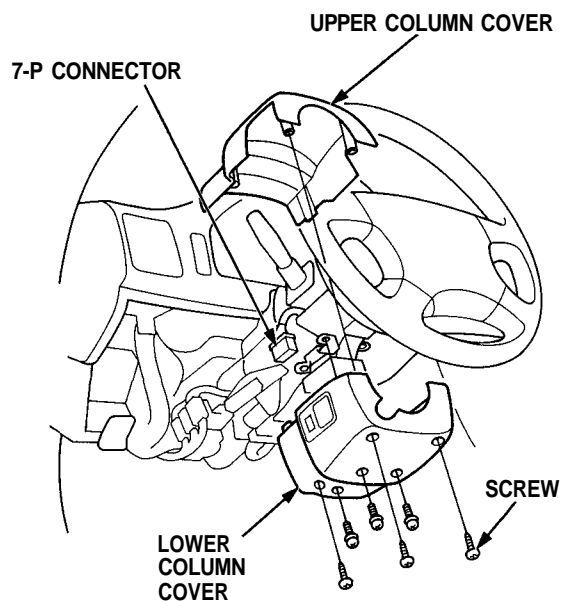

6. Turn the steering wheel toward the combination light switch, and remove the two screws.
7. Disconnect the 14-P connector from the switch, then remove the switch.

COMBINATION LIGHT SWITCH

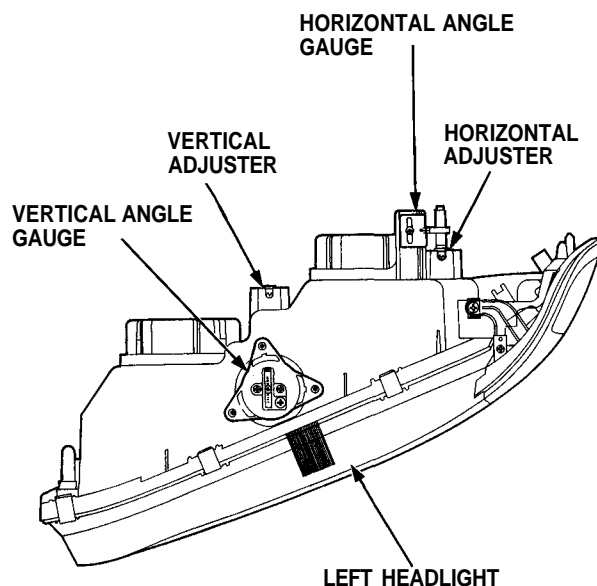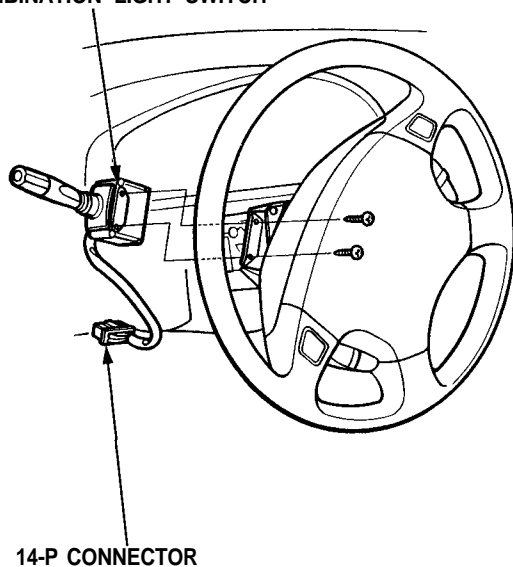

Before adjusting the headlights:

- Park the car on level ground.
- Make sure the fuel tank is full.
- The driver or someone who weighs the same should sit in the driver's seat.
- Load the trunk with the items you usually carry (if you usually pull a trailer, attach it to the car).
- Push down on the front and rear bumpers several times to make sure the car is sitting normally.

(cont'd)