



Headlights

Headlight Assembly Replacement

1. Remove the front bumper (see [section 20](#)).
2. Remove the mounting screw and pull out the front side marker/parking lights, then disconnect all connectors from them.

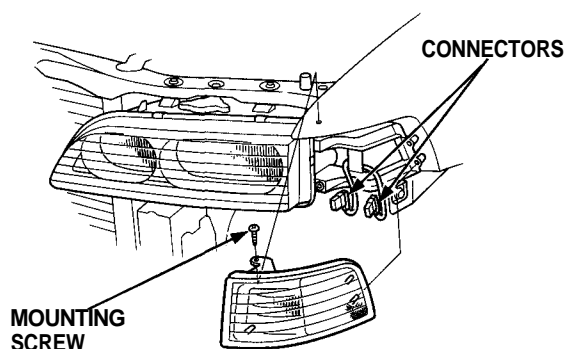

3. Remove the five mounting bolts and disconnect the 4-P connector from the headlight, then replace the headlight.

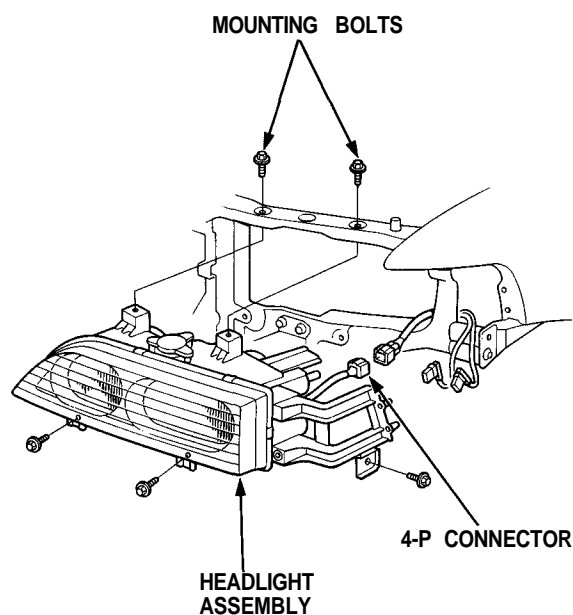

4. Check the horizontal and vertical aiming of the headlight (see page [23-181](#) through [183](#)).

Bulb Replacement

CAUTION:

- Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.
- Do not try to replace or clean the headlights with the lights on.

1. Remove the bulb access cap.
2. Disconnect the 2-P connector and remove the retaining spring, then replace the bulb.

