



# Front Turn Signal Lights

## Replacement

1. Remove the screw from under the front bumper, then pull out the cover.

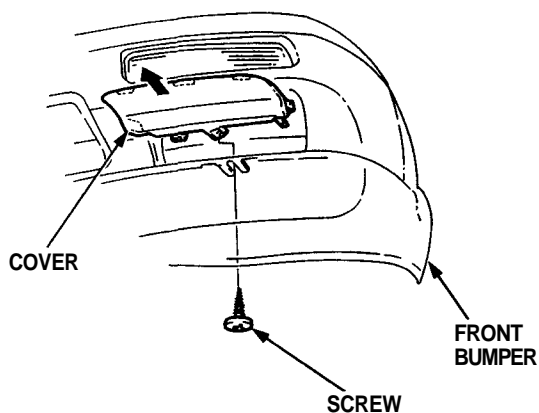

2. Loosen the mounting screw and pull the light out, then disconnect the 2-P connector.

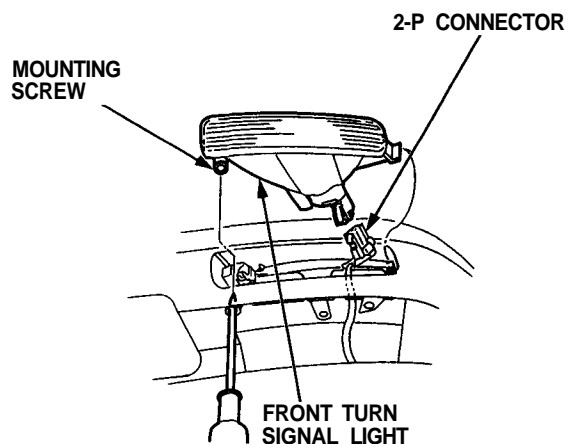

3. Turn the bulb socket 45° counterclockwise to remove it from the housing, and replace the bulb.

