





# Taillights

## Replacement

1. Open the trunk lid.
2. Remove the taillight access panel.
3. Remove the rear trim panel.

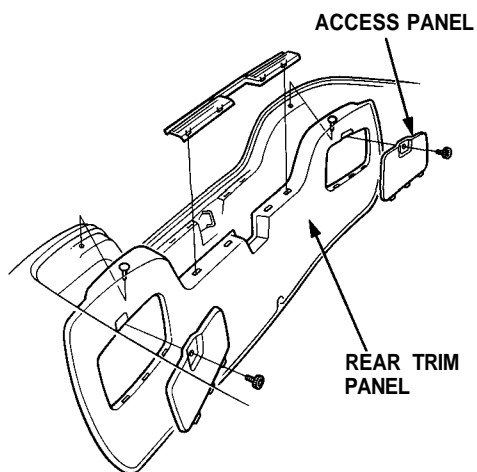

4. Disconnect the 8-P connector from the taillight.
5. Remove the six mounting nuts and the taillight assembly.

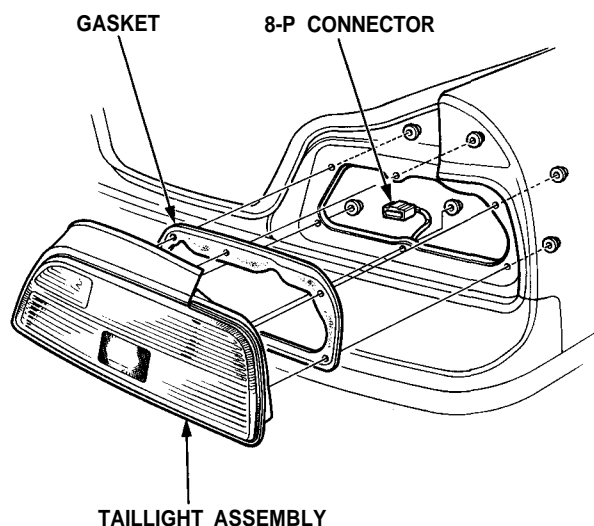


### NOTE:

- Inspect the gasket; replace it if it is distorted or stays compressed.
- After installing the taillight, run water over it to make sure it does not leak.

## Bulb Replacement

1. Open the trunk lid.
2. Remove the taillight access panel.
3. Remove the bulb socket housing.

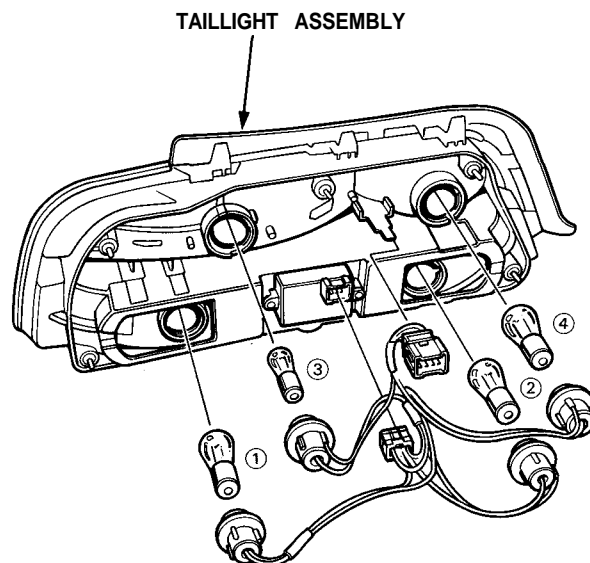

4. Remove the bulbs from the housing.

- ① and ②: BRAKE LIGHT/TAILLIGHT BULBS (32CP/2CP)
- ③: BACK-UP LIGHT BULB (32CP)
- ④: TURN SIGNAL LIGHT BULB (45CP)