




# Dash Lights Brightness Control

## Component Location Index



### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-409](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

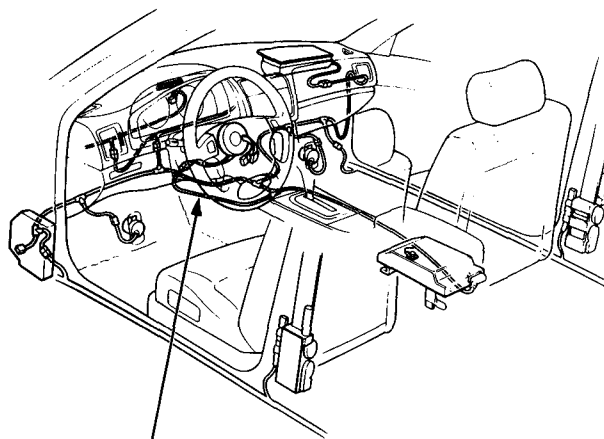

**SRS MAIN HARNESS**  
(Covered with yellow outer insulation)

**DASH LIGHTS BRIGHTNESS  
CONTROLLER**  
Test/Replacement, page [23-192](#)

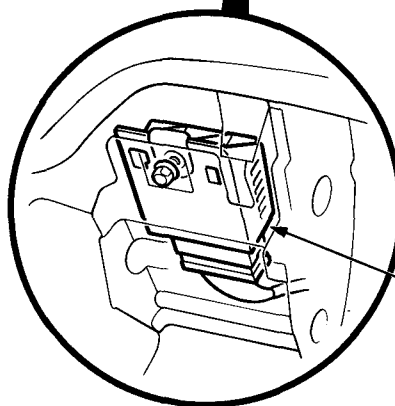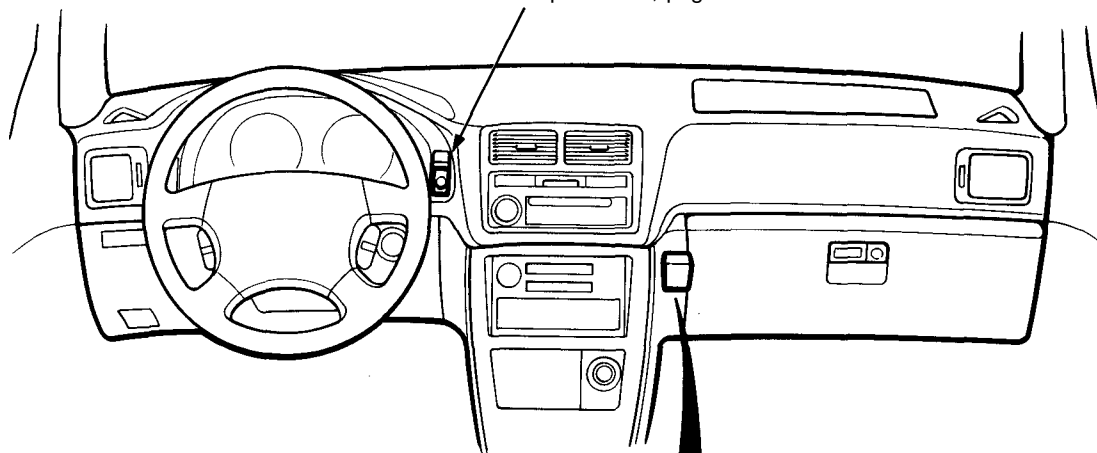

**DASH LIGHTS BRIGHTNESS  
CONTROL UNIT**  
Input Test, page [23-191](#)