


Dash Lights Brightness Control

Controller Test/Replacement

1. Remove the two screws and disconnect each switch connector, then remove the instrument panel.

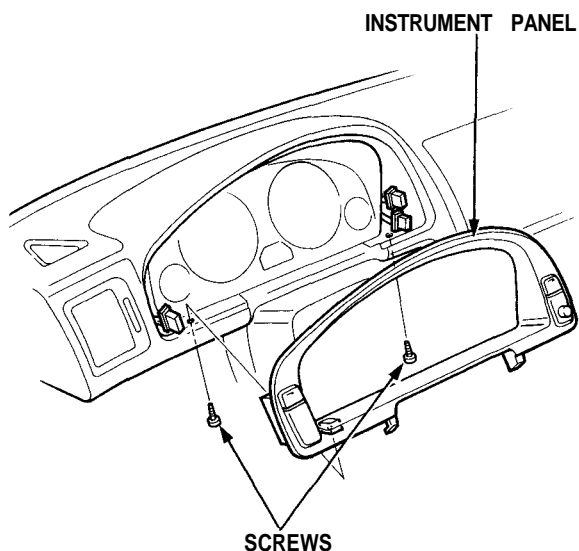

2. Remove the dash lights brightness controller from the instrument panel.
3. Measure resistance between A and B terminals while rotating the adjusting dial.

Resistance should vary from $0\ \Omega$ to $20\ k\Omega$ as the dial is rotated.

NOTE: Resistance will vary slightly with temperature.

