




Entry Light Control System

Component Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

- **DRIVER'S DOOR OUTSIDE HANDLE SWITCH**
Test, page 23-202
- **IGNITION KEY LIGHT**
Replacement, page 23-200
- **IGNITION KEY SWITCH**
Test, page 23-202

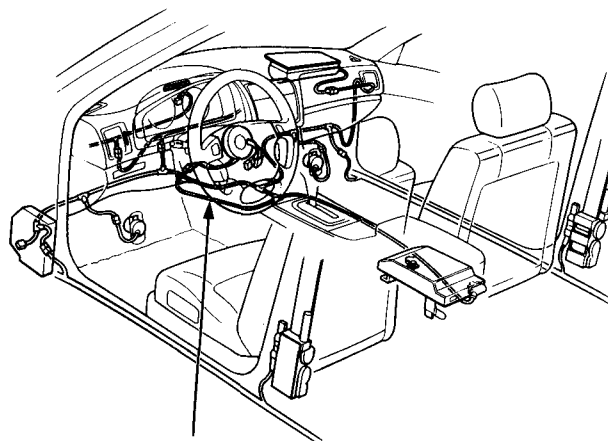

SRS MAIN HARNESS
(Covered with yellow outer insulation)

