


Entry Light Control System

Courtesy Light Replacement

NOTE: The bulb or lens alone can be replaced without removing the door panel.

1. Remove the door panel (see [section 20](#)).
2. Remove the two screws and retainer plate from behind the door panel.

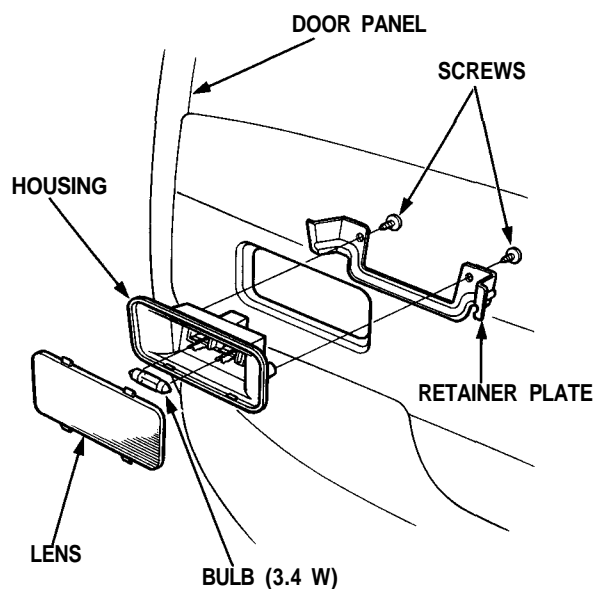


3. Replace the courtesy light.

NOTE: The illustration shows the driver's door courtesy light.

Ignition Key Light Replacement

1. Remove the dashboard lower cover (see [page 23-79](#)).
2. Remove the dashboard center panel.
3. Turn the bulb socket 45° counterclockwise to remove it from the key light housing.

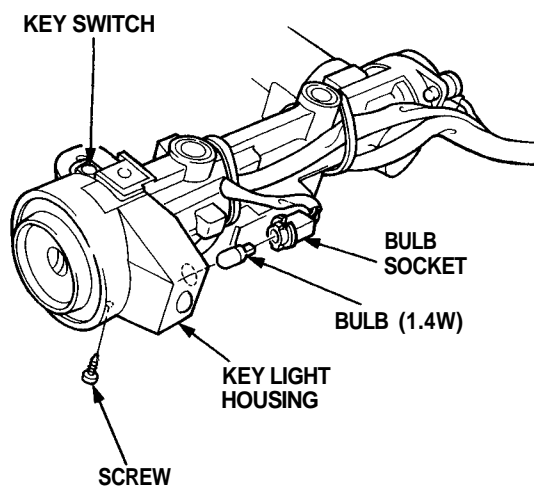

4. Remove the key light housing from the key cylinder by removing the attaching screw.