





# Door Switch Test

- 1. Remove the door panel (see [section 20](#)).
- 2. Disconnect the 8-P connector from the door lock actuator assembly.

NOTE: Driver's door switch is shown. Passenger's door switch is similar.

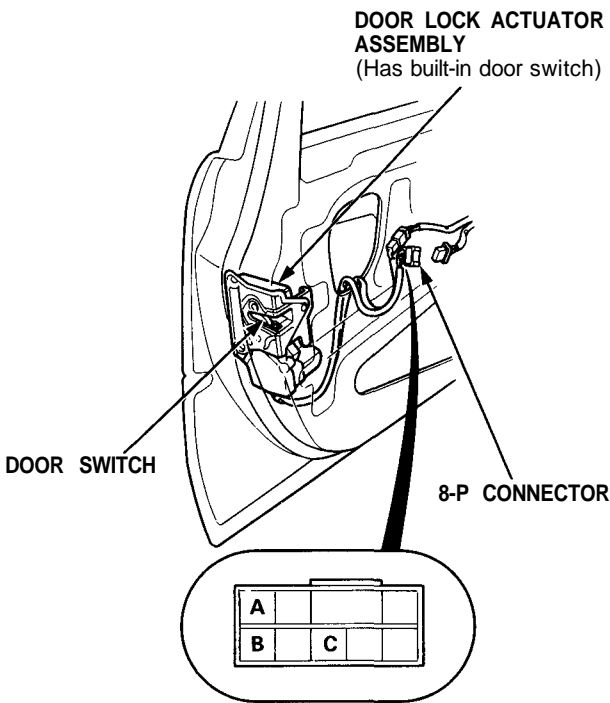

NOTE: Change door switch position by opening and closing the door (latch) as shown.

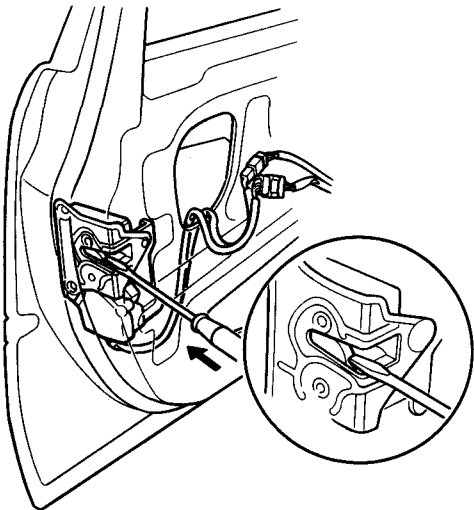

- 3. Check for continuity between the terminals in each switch position according to the table.

Terminal	A	B	C
Position			
OPEN		○	○
CLOSE	○	○	