


Entry Light Control System

Ignition Key Switch Test

1. Remove the dashboard lower cover (see page [23-79](#)).
2. Disconnect the 8-P connector from the main wire harness.
3. Check continuity between the No. 2 and No. 7 terminals.
 - There should be continuity with the ignition key inserted.
 - There should be no continuity when the ignition key is removed.

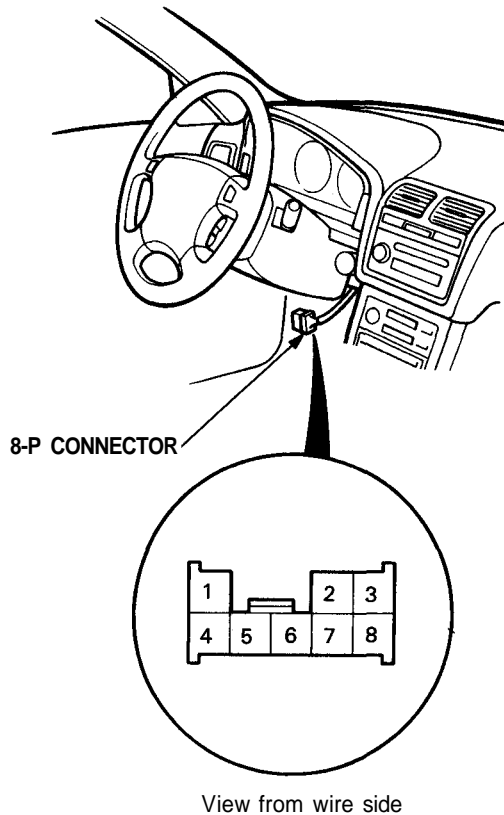

Driver's Door Outside Handle Switch Test

1. Remove the driver's door panel (see [section 20](#)).
2. Disconnect the 4-P connector from the outside handle switch.
3. Check continuity between the No. 1 and No. 2 terminals.
 - There should be continuity when the outside handle is pulled.
 - There should be no continuity when the outside handle is released.

DRIVER'S DOOR OUTSIDE HANDLE SWITCH

