



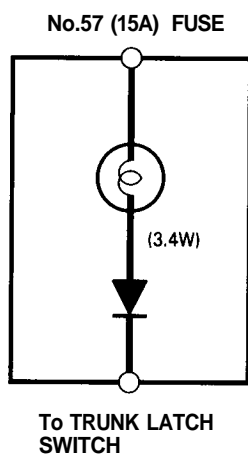

Trunk Light and Latch Switch


Trunk Light Replacement

1. Pry the trunk light lens off the housing.
2. Pry out the light housing and disconnect the 3-P connector from it.

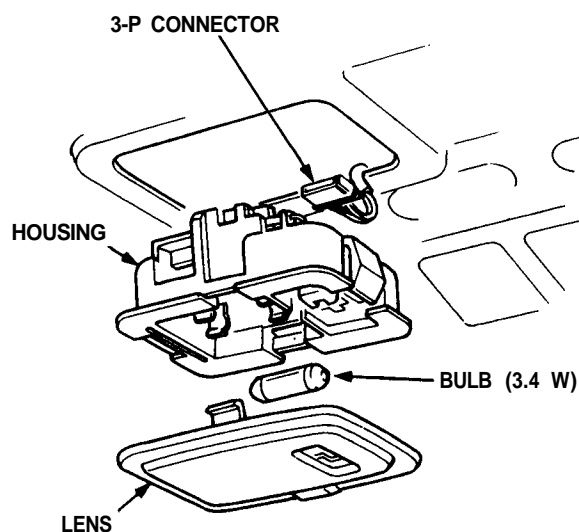

Latch Switch Test/Replacement

1. Open the trunk lid, and remove the trunk rear trim panel (see [section 20](#)).
2. Disconnect the 6-P connector from the trunk latch.

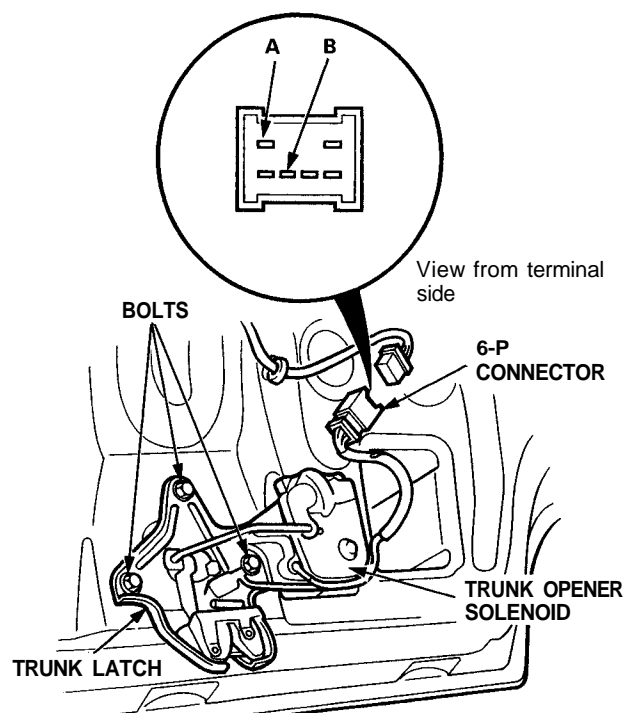

3. Check continuity between the A and B terminals.
 - There should be continuity when the latch is in the open position.
 - There should be no continuity when the latch is closed.
4. If necessary, remove the three bolts from the trunk lid, then remove the trunk latch assembly. (The switch cannot be replaced separately.)