


Brake Lights

Brake Switch Test


1. If one of the brake lights does not go on, check the brake light bulb in the taillight or the high mount brake light.
2. If none of the brake lights go on, check the No. 39 (20 A) fuse in the under-hood fuse/relay box.
3. If the fuse and bulbs are OK, disconnect the 4-P connector from the brake switch.

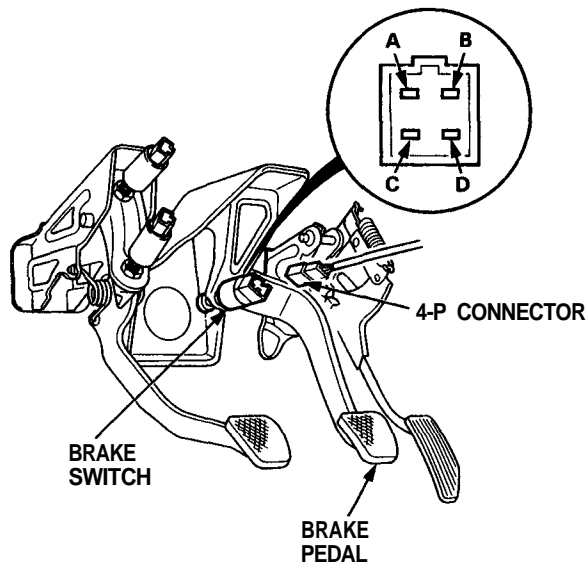

4. Check for continuity between the B and C terminals. There should be continuity with the brake pedal pushed.
 - If there is no continuity, adjust the pedal height (see [section 19](#)), and recheck it.
 - If there is still no continuity, replace the switch.
 - If there is continuity, but the brake lights do not go on, check for
 - poor ground (G451),(G451,G252('91-'92)).
 - an open in the WHT/GRNi or GRN/WHT wire.
 - faulty brake light failure sensors (see page [23-163](#)).

High Mount Brake Light Replacement

1. Open the trunk lid.
2. Remove the trunk lid inner trim panel (see [section 20](#)).
3. Disconnect the 2-P connector from the high mount brake light.

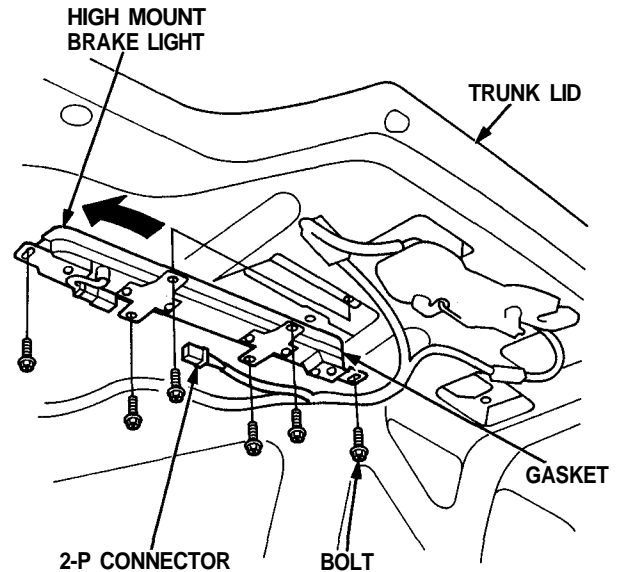

4. Remove the six mounting bolts and the high mount brake light (LED).

NOTE:

- Inspect the gasket; replace it if it is distorted or stays compressed.
- After installing the high mount brake light, run water over it to make sure it does not leak.