


# Cigarette Lighter

## Replacement


### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

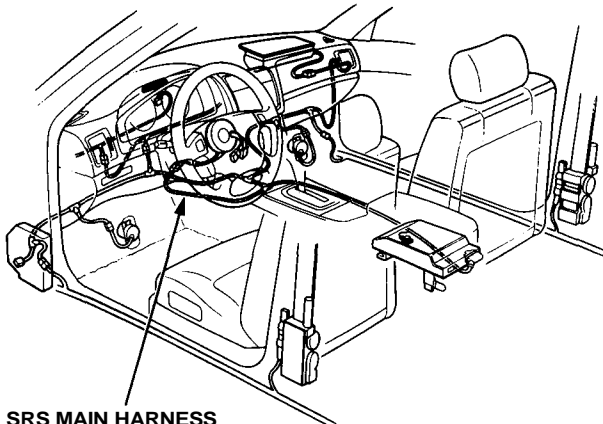

**SRS MAIN HARNESS**  
(Covered with yellow outer insulation)

1. Remove the center console panel (see [section 20](#)).
2. Disconnect the thermofuse housing from the socket end.

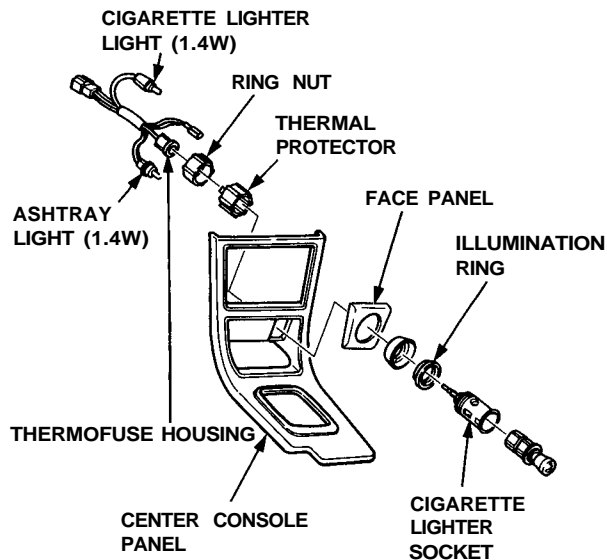

3. Remove the ring nut and separate the cigarette lighter socket from the thermal protector.
4. When installing the cigarette lighter, align each lug on the face panel, illumination ring, and cigarette lighter socket with the groove of the hole, then position the bulb housing on the thermal protector between the stops of the center console panel.
5. Make sure that the ground wire, bulb socket, and thermo fuse housing are seated to the cigarette lighter assembly.