


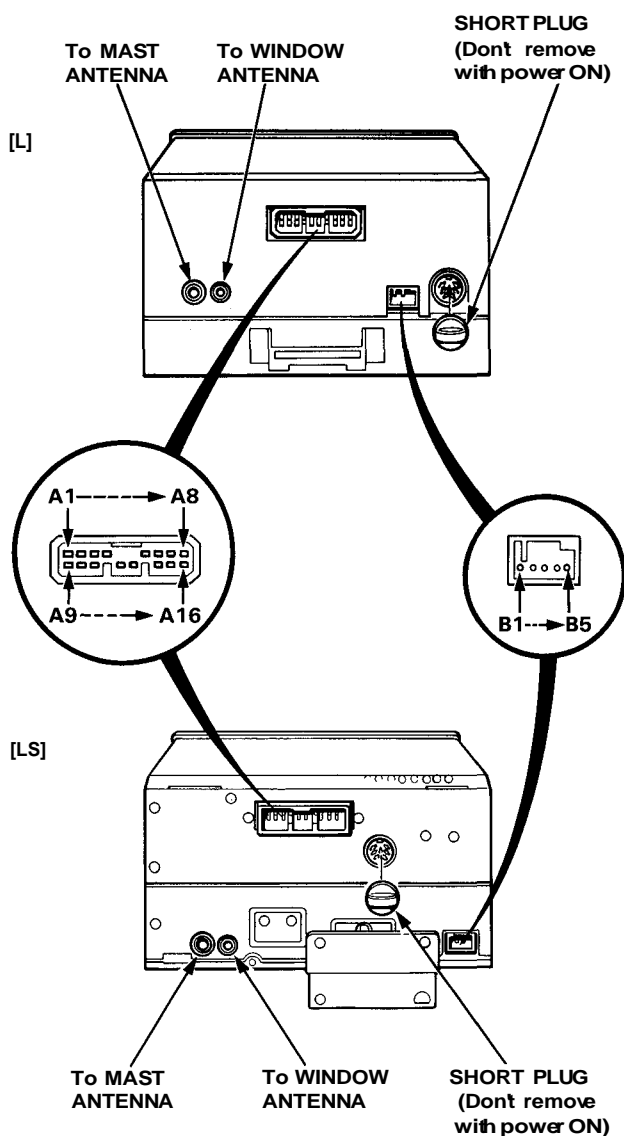

Unit Terminals



| Terminal | Wire | Connects to |
|----------|--------|---------------------|
| B1 | — | (Not used) |
| B2 | — | (Not used) |
| B3 | — | (Not used) |
| B4 | — | (Not used) |
| B5 | LT BLU | Radio remote switch |

[L]

| Terminal | Wire | Connects to |
|----------|---------|---------------------------------------|
| A1 | RED/GRN | Right front door speaker/tweeter ⊕ |
| A2 | BLU/GRN | Driver's door speaker/tweeter ⊕ |
| A3 | RED/BLK | Lights-on signal |
| A4 | WHT/YEL | Constant power (Tuning memory) |
| A5 | YEL/RED | ACC (Main stereo power supply) |
| A6 | YEL/WHT | Power to antenna with radio switch ON |
| A7 | BLU/YEL | Left rear speaker/tweeter ⊕ |
| A8 | RED/YEL | Right rear speaker/tweeter ⊕ |
| A9 | BRN/BLK | Right front door speaker/tweeter ⊖ |
| A10 | GRY/BLK | Driver's door speaker/tweeter ⊖ |
| A11 | BRN | Telephone mute signal |
| A12 | GRN/WHT | Security (IN) |
| A13 | LT GRN | Security (OUT) |
| A14 | BLK | Ground (G501) |
| A15 | GRY/WHT | Left rear speaker/tweeter ⊖ |
| A16 | BRN/WHT | Right rear speaker/tweeter ⊖ |

[LS]

| Terminal | Wire | Connects to |
|----------|---------|---|
| A1 | BLU | Right front door speaker/tweeter ⊕ (Via amplifier) |
| A2 | WHT | Driver's door speaker/tweeter ⊕ (Via amplifier) |
| A3 | RED/BLK | Lights-on signal |
| A4 | WHT/YEL | Constant power (Tuning memory) |
| A5 | YEL/RED | ACC (Main stereo power supply) |
| A6 | YEL/WHT | Power to antenna and amplifier with radio switch ON |
| A7 | ORN | Left rear speaker/tweeter ⊕ (Via amplifier) |
| A8 | YEL | Right rear speaker/tweeter ⊕ (Via amplifier) |
| A9 | BRN | Right front door speaker/tweeter ⊖ (Via amplifier) |
| A10 | BLK | Driver's door speaker/tweeter ⊖ (Via amplifier) |
| A11 | BRN | Cellular phone mute signal |
| A12 | GRN/WHT | Security (IN) |
| A13 | LT GRN | Security (OUT) |
| A14 | BLK | Ground (G501) |
| A15 | GRN | Left rear speaker/tweeter ⊖ (Via amplifier) |
| A16 | RED | Right rear speaker/tweeter ⊖ (Via amplifier) |