


# Stereo Sound System


## Front Speaker Replacement

1. Remove the front door panel (see [section 20](#)).
2. Remove the four screws, then disconnect the 2-P connector from the speaker.

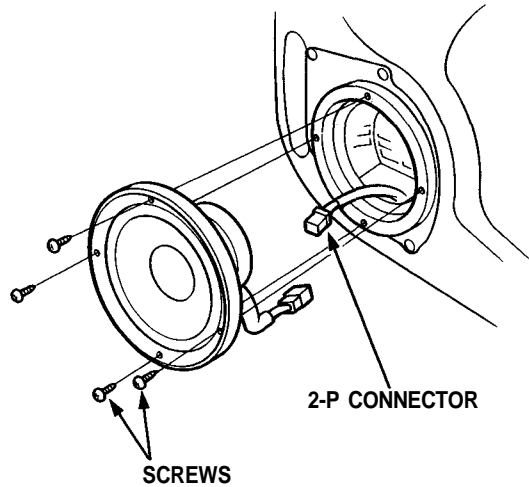

## Front Tweeter Replacement

1. Remove the front door panel (see [section 20](#)).
2. Remove the 2-P connector from the other connectors, and remove the clamp from the door panel.

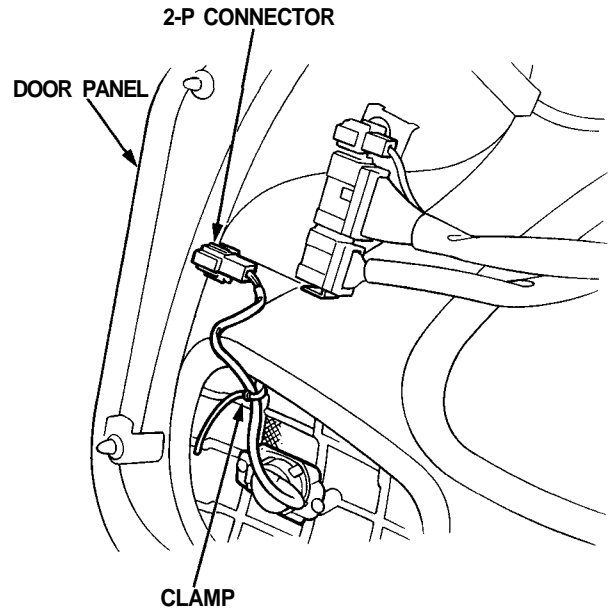

3. Remove the two screws and replace the tweeter.

