




## Rear Speaker Replacement

1. Remove the rear seat back (see [section 20](#)).
2. Remove the rear shelf (see [section 20](#)), and disconnect the 2-P connectors from the rear tweeters.
3. Remove the four screws, then disconnect the 2-P connector from the speaker.
4. Remove the speaker from the speaker adapter.

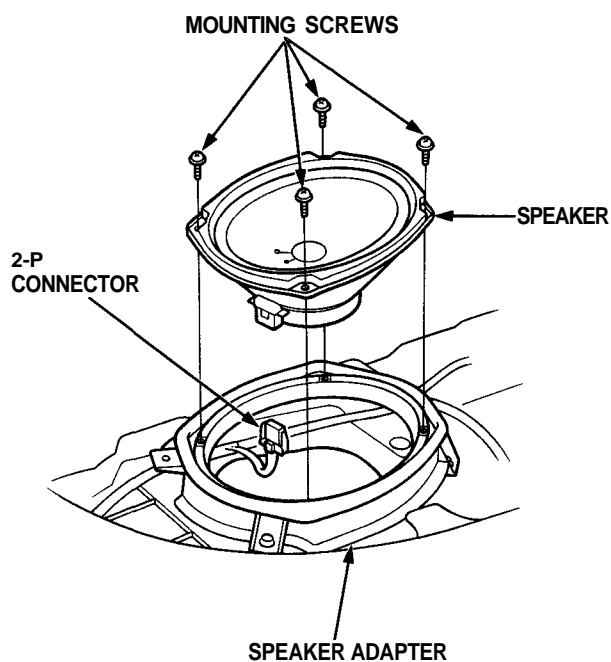

## Rear Tweeter Replacement

1. Remove the rear seat back (see [section 20](#)).
2. Remove the rear shelf (see [section 20](#)), and disconnect the 2-P connectors from the rear tweeters.
3. Remove the four clips and replace the tweeter.

