


Rear Window Defogger

Component Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

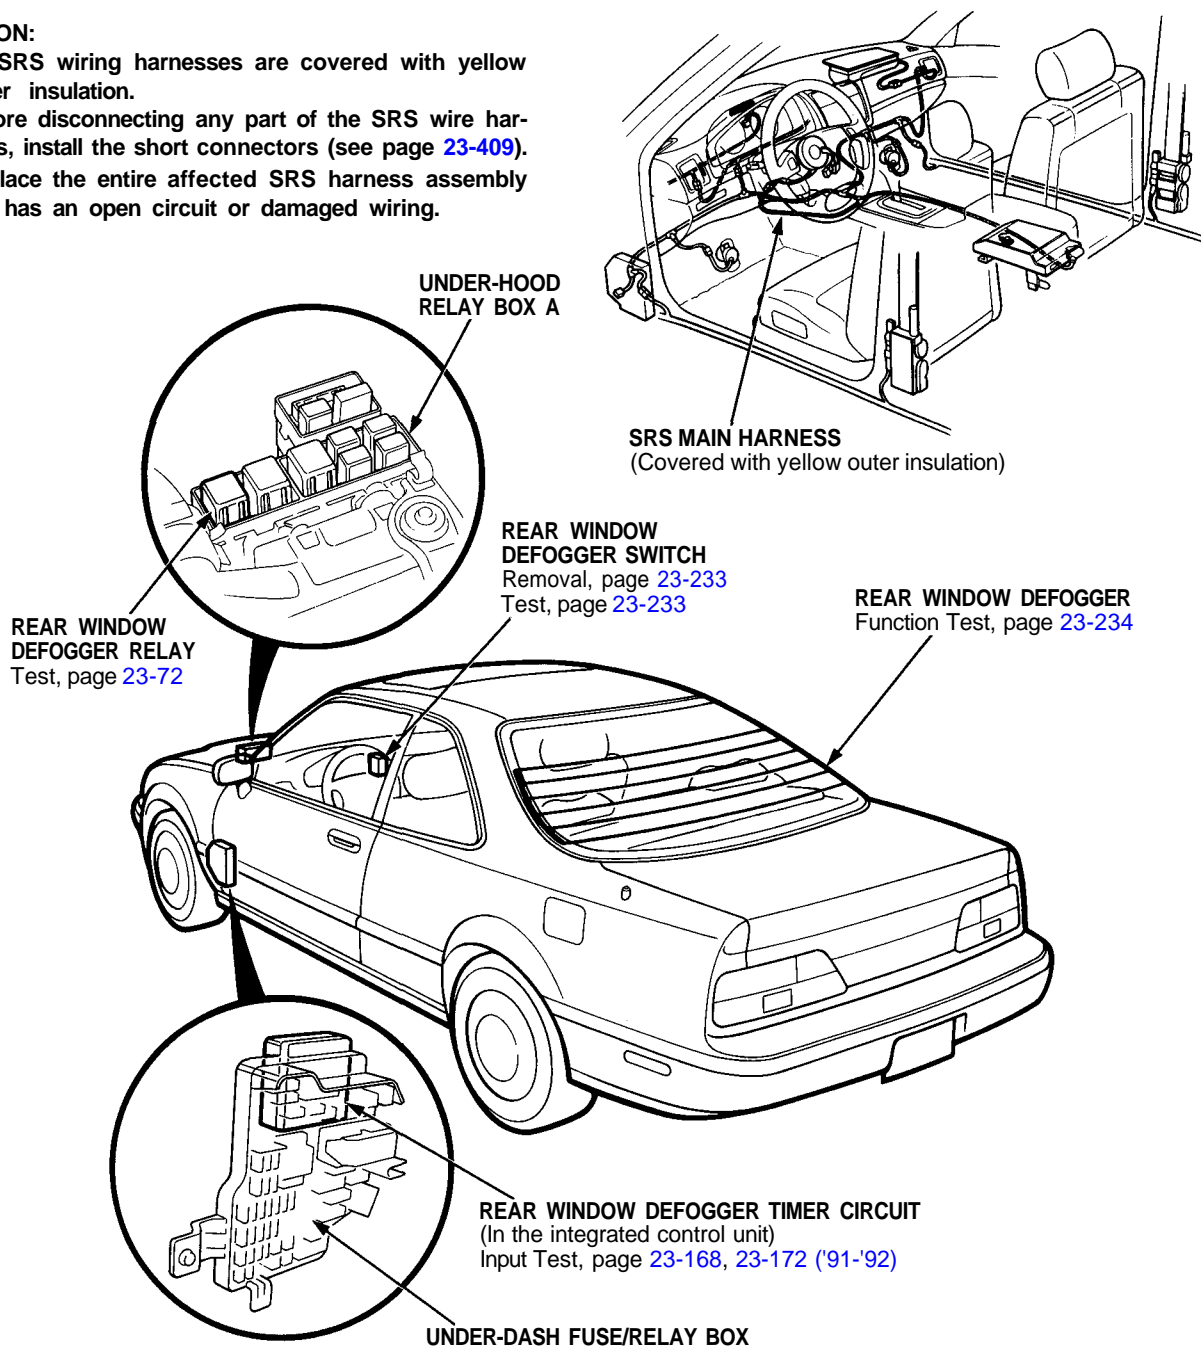

Description

The rear window defogger is controlled by the integrated control unit.

When the defogger switch in the instrument panel is pushed, it sends a signal to the defogger timer in the integrated control unit, and the defogger stays on for 25 minutes or until the ignition switch is turned off.

The indicator light in the switch comes on when the defogger works.