



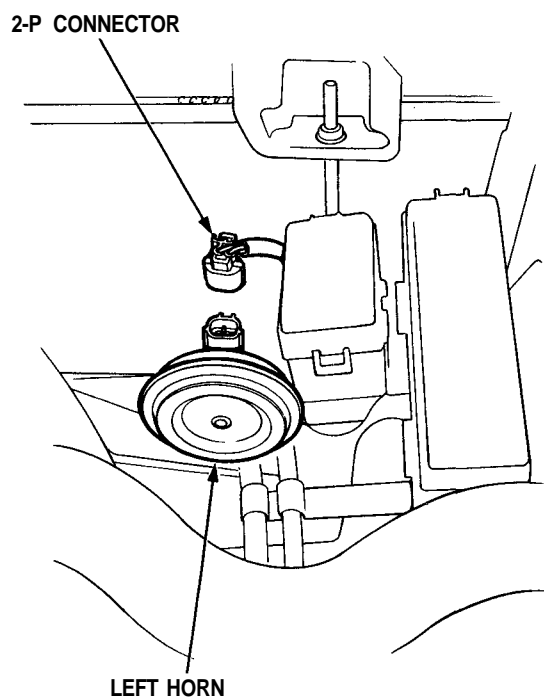


Horn Test

1. Disconnect the 2-P connector from the horn.
2. Remove the right and left horns.

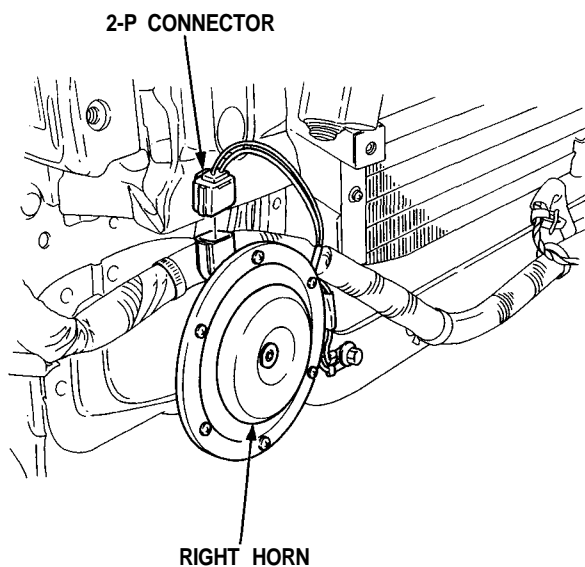

3. Test the horn by connecting battery power to one terminal and grounding the other. The horn should sound.

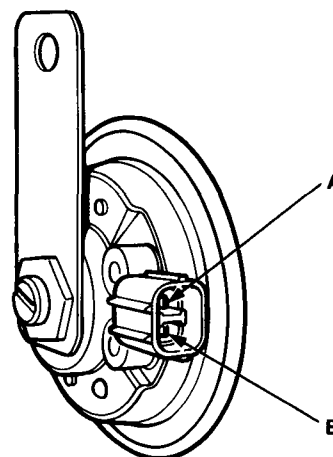

4. Replace the horn if it fails to sound.